

Owner's / Operator's Manual

READ THIS MANUAL CAREFULLY
IT CONTAINS IMPORTANT SAFETY INFORMATION

7150

150cc Fun Kart



RECOMMENDED MINIMUM OPERATOR AGE: 12

**THIS VEHICLE IS FOR OFF-ROAD USE ONLY
THIS VEHICLE IS NOT DESIGNED FOR USE ON RENTAL TRACKS OR RACING**

BEFORE OPERATING THIS VEHICLE, THE OWNER AND EACH OPERATOR MUST UNDERSTAND THIS VEHICLE WAS NOT DESIGNED OR MANUFACTURED TO MEET SPECIFICATIONS FOR USE ON PUBLIC ROADS, STREETS, HIGHWAYS, AND THOROUGHFARES. THE OWNER AND EACH OPERATOR MUST READ AND UNDERSTAND ALL THE INSTRUCTIONS FOR PROPER ASSEMBLY AND SAFE OPERATION, AS WELL AS THE INSTRUCTIONS CONCERNING THE ENGINE AND ALL OTHER PORTIONS OF THE VEHICLE. CHILDREN MUST BE OF AGE 12 OR OLDER AND SUPERVISED BY AN ADULT AT ALL TIMES WHEN USING THIS FUN-KART.

MY VEHICLE IDENTIFICATION NUMBER

Record the VIN number and Model number of your Manco Fun Kart below for service and insurance records.
The VIN number is hard tagged on the kart frame just behind the drivers seat.

VIN: _____

Model: 7150L-__ __

MANCO POWERSPORTS LIMITED WARRANTY

Manco PowerSports (hereinafter referred to as "Manco") hereby warrants to the original purchaser that the frame components of new Manco recreational vehicles will be free from defects in material and workmanship. The period of warranty is thirty (30) days from date of purchase for the component parts (except as noted below), ninety (90) days from the date of purchase for the frame, and (1) year from the date of purchase for the engine. Manco, if notified of a defect in material or workmanship during the period of warranty, will repair or replace, at its option, defective parts at no charge, other than the reasonable cost for the transportation of the component(s). Manco will also agree to pay reasonable charges for labor, if necessary, to perform a warranty repair.

The original purchaser must operate the vehicle and maintain the vehicle in accordance with the instructions provided in the Operator's Manual, the supplements hereto, and labels affixed to the vehicle. Additionally, within the (10) days of the discovery of an alleged defect, the original purchaser must provide written notification to: Manco's Customer Service Department at 4404 Engle Ridge Drive, Fort Wayne, IN 46804

General Exclusions: This limited warranty does not cover component failure or damage caused by any of the following: abnormal strain or stress, neglect; abuse; improper assembly of components which were supplied in the factory sealed carton after the vehicle left Manco; improper maintenance, improper use of the vehicle, including, but not limited to racing, jumping, stunt driving, or any other uses prohibited by the Operator's Manual. Additionally, this warranty does not cover component failure or damage to vehicles which are leased or rented, or vehicles which are used at a concession track.

Specific Exclusions: This limited warranty does not apply to components, which are subject to normal wear and tear. These items include, but are not limited to, the tires, brakes, throttle, shift, and brake cables, drive belt, the torque converter system, chain, seat, lights, fasteners, decals, or cosmetic body panels.

MANCO MAKES NO OTHER WARRANTY OF ANY KIND, EXPRESSED OR IMPLIED. ALL WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE WHICH EXCEED THE OBLIGATIONS AND TIME LIMITATIONS SPECIFIED IN THE WARRANTY ABOVE ARE HEREBY DISCLAIMED BY MANCO AND EXCLUDED FROM THIS WARRANTY. ADDITIONALLY, THIS WARRANTY EXCLUDES ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF USE. SOME STATES DO NOT ALLOW A MANUFACTURER TO EXCLUDE OR LIMIT INCIDENTAL OR CONSEQUENTIAL DAMAGES AND, THEREFORE, THE ABOVE EXCLUSION MAY NOT APPLY TO YOU.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY WILL LAST, IT IS POSSIBLE THAT THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER LEGAL RIGHTS, WHICH VARY, FROM STATE TO STATE.

TABLE OF CONTENTS

<u>SUBJECT</u>	<u>PAGE</u>
General Information and Safety	
Vehicle Records -----	1
Warranty Information -----	1
Table of Contents -----	2
Forward -----	3
Warnings and Cautions -----	3 - 9
Some Words About Safety -----	9 - 12
Are You Ready To Drive? -----	13 - 16
Safe Driving Precautions -----	16 - 18
Kart Operation	
Kart Operation -----	18 - 20
Kart Features and Locations -----	21
Kart Service	
Air Cleaner -----	22
Engine Lubrication -----	22 - 23
Spark Plug -----	23
Carburetor -----	23
General Cleaning -----	24
General Lubrication -----	24
Chain Lubrication and Adjustment -----	24
Front and Rear Shock Adjustment -----	25
Shifter Adjustment -----	25
Storage Instruction -----	25
General Maintenance	
Tire/Wheel Replacement -----	26
Front End Alignment -----	26 - 27
Speed Reduction Installation -----	27
Replacement Parts and Service -----	28
Specifications	
Dimensions -----	28
Engine -----	28
Capacities -----	29
Miscellaneous -----	29
Periodic Check and Service Table -----	29
Electrical Schematic -----	30
Parts Listings	
Engine -----	31 - 50
Frame -----	51 - 69

FORWARD

Congratulations on the purchase of your Manco Fun Kart. Before operating this vehicle, the owner and each operator must understand that this vehicle was not designed or manufactured to meet specifications for use on public roads, streets, highways and thoroughfares. The owner, operator(s) and passenger(s) must read and understand all the instructions for proper assembly and safe operation, as well as the instructions concerning the engine and all other portions of the vehicle as described and illustrated in this manual and on the included safety video. Children must be of the specified age or older and supervised by an adult at all times when using the fun kart.

Be sure to follow the recommended maintenance schedule and service your kart accordingly. Preventative maintenance is extremely important to the longevity of your kart. **NOTE: A new kart requires an engine break in period of 5 hours, whereby the engine oil MUST be changed (See SERVICE section page 23)**

Beginners are urged to seek instruction from a dealer or qualified instructor before and during the initial use of this kart. It is also recommended to practice in a large open area to become familiar with the operation of the kart.

We hope you will have a fun, safe experience with our products and thank you again for choosing a Manco Fun Machine.

CAUTIONS AND WARNINGS

-  This is the safety alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.
-  Read and follow all instructions in this Owner's manual and any accompanying supplements before attempting to operate this Fun-Kart. Make sure to view the Operations and Safety video.

WARNING

Indicates a potential hazard that could result in severe personal injury or death

CAUTION

Indicates a potential hazard which may result in personal injury or damage to the Fun-Kart.

NOTE: Use of the word "NOTE" will alert you to key information or instructions.

IMPORTANT SAFETY INFORMATION

WARNING

Exhaust fumes are toxic.

- California Proposition 65 WARNING: Gasoline engine exhaust from this Fun-Kart contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm. The engine exhaust contains carbon monoxide, which is a tasteless, odorless, poisonous gas.
- NEVER operate this Fun-Kart indoors or in an enclosed area without adequate ventilation

WARNING

This Fun-Kart may have been supplied to you completely assembled. To prevent injury or death read and follow the assembly instructions to make sure the Fun-Kart was assembled properly.

WARNING

Check tire pressure before each use.

- Prior to operating the vehicle check and adjust tire pressure to the proper operating pressure as indicated on the sidewall of each tire. A tire pressure gauge is required to obtain accurate readings.

WARNING

Fun-Kart modification or removal of original equipment or safety decals can render the Fun-Kart unsafe for operation.

WARNING

Safety decals must be replaced if they become unreadable or detached from the Fun-Kart.

- If decals are unreadable or missing, warning of potential hazards or safety requirements may be lacking.

WARNING

This Fun-Kart is not designed for use on rental tracks of any kind.

 **WARNING**

NEVER adjust, repair, or clean the Fun-kart while it is in motion.

 **WARNING**

The safe operation of this Fun-Kart is dependent upon the operator's ability to exercise proper judgment.

- Operator and passenger must not be too small or too large for controlled operation.
- Operator and passenger must be of sufficient age, understanding, mental capacity, and physical capacity to safely operate the Fun-Kart.
- Fun-Kart should only be operated after mature, supervised instruction and sufficient practice in an un-congested area.

 **WARNING**

Operator and any passengers **MUST** always wear a properly fitting motorcycle helmet approved by agencies such as the Department of Transportation (DOT), Safety Helmet Council of America (SHCA), or Snell Memorial Foundation (SNELL).

- Most accident fatalities are due to head injuries.
- Operator (and any passenger) should also wear face shields or goggles, boots, gloves and other appropriate protective clothing.

(See KART OPERATION)

 **WARNING**

Long hair, loose clothes, or jewelry can get caught in moving parts below and behind the seat or surrounding environment.

- Remove or tie back anything loose that can reach below and behind the seat before riding.

 **WARNING**

NEVER place hands, feet, or any body parts or clothing near the engine, wheels, chain, and other rotating parts of the Fun-Kart while riding or running the engine.

- Use caution in performing required maintenance on or near operating engine.
- Use caution after the engine has been running, since the engine and other drive components may be extremely hot.

 **WARNING**

STOP the engine if the Fun-Kart makes unusual noises or vibrations.

- Check the Fun-Kart for damage.
- Excessive noise or vibration is a sign of loose or worn parts.

 **WARNING**

Keep guards in place at all times.

- Prevent accidental contact by the operator or service personnel while the Fun-Kart is running.
- The guards over the brake, clutch or torque converter, axle and drive sprockets also help prevent mud and debris from coming in contact with those items.

 **WARNING**

Be sure the passenger restraint system (i.e. Seat Belt) is properly adjusted and fastened at all times during operation.

- If the passenger restraint system is not properly used by the operator and/or passengers, loss of control and possible personal injury and/or Fun-Kart damage can occur.

 **WARNING**

When there is no passenger in the Fun-Kart, the passenger seatbelt must be securely fastened within the Fun-kart.

- If the passenger restraint system is not properly used by the operator and/or passenger, loss of control and possible personal injury and/or Fun-Kart damage can occur.

 **WARNING**

All screws, nuts, and bolts must be properly tightened to make sure the Fun-Kart is in safe operating condition.

 **WARNING**

Prevailing-torque type locknuts must be replaced with new after the old locknuts have been removed.

- Replace with the same type of locknut to make sure they function properly. Refer to the maintenance section for more information on locknuts.

 **WARNING**

Keep the engine free of dirt and debris, especially in the throttle linkage area.

 **WARNING**

NEVER start the engine without the operator properly seated and the restraint system properly adjusted and secured.

 **WARNING**

NEVER start the engine without checking to see that the throttle control is in idle position.

 **WARNING**

NEVER tamper with, alter, or change the Fun-Kart's engine governor settings.

- The governor as set by the engine manufacturer, limits maximum engine speed and protects the engine from damage.
- Excessive engine speed is potentially dangerous to operator, passengers, bystanders, and engine.

 **WARNING**

Check fuel supply before each use.

- NEVER fill fuel tank while the engine is running or hot.
- DO NOT overfill tank.
- ALWAYS allow at least ½" of expansion space at the top of tank.
- There should not be any fuel in the filler neck.
- Replace cap tightly to prevent a fuel spillage fire hazard.

NOTE: Always use an original gas cap or OEM replacement.

- NEVER fill fuel tank while the Fun-Kart is inside a building.
- After filling the tank, move the Fun-Kart at least ten feet before attempting to start the engine.

 **WARNING**

ALWAYS use extreme caution when starting the engine.

- Hot engine, muffler, or drive components can burn on contact.

 **WARNING**

Wet, slippery, rough, or sloped terrain is potentially dangerous and may result in injury if proper caution is not observed.

- ALWAYS SLOW DOWN
- Operator must use mature judgment, skill, and experience to choose a speed suitable for terrain and riding conditions in protecting operator and any bystanders.
- Operator must use mature judgment, skill and experience in choosing suitable terrain for individual operational capabilities.

 **WARNING**

When turning on pavement, loose gravel, or similar surfaces, there is an increased risk in loss of control.

**** ALWAYS SLOW DOWN! ****

 **WARNING**

ALWAYS SLOW DOWN when turning.

- High-speed turning can cause loss of control and/or possible operator injury.
- Turning on a slope increases the risk of rollover.
- Practice operation is required to coordinate turning skill.
- Failure to operate this Fun-kart at a safe speed while turning can result in a strong possibility of severe personal injury.

 **WARNING**

Washing or operating the Fun-Kart in freezing temperatures can result in water freezing in the throttle cable conduit and/or on the throttle mechanism.

- This may result in the throttle sticking which can cause the engine to continue to run and result in loss of control.

 **WARNING**

Operating the Fun-Kart in conditions where water, mud, snow, dirt, sand, or other debris can get into the throttle cable conduit and/or on the throttle mechanism can cause binding of the cable and/or the throttle mechanism.

- This may result in the throttle sticking which can cause the engine to continue to run and result in loss of control.

 **WARNING**

Assembly, maintenance, and/or repair of this Fun-Kart should only be performed by designated dealers or authorized small engine centers (for engine repairs) so that no unsafe conditions or modifications are made.

 **WARNING**

Read and keep all supplied printed material.

- Supplements to this Operator's Manual contain updated information relative to your specific Fun-Kart model. It is important to keep all of these documents for reference.

 **WARNING**

When making repairs or adjustments to the Fun Kart, the spark plug wire **MUST be disconnected and kept away from the spark plug to prevent accidental starting.**

- When working on, around, or restarting engine, use extreme caution to avoid contact with the muffler, cylinder head or any potentially hot area on or around the engine.
- Ensure that all guards are in place prior to starting the engine.

 **CAUTION**

During Fun-Kart storage, keep it in a place where gasoline fumes will not reach and open flame, spark, or other source of ignition.

- For long-term storage, fuel tank should be drained in an open, cool area.
- Engine must be allowed to cool before storage in any enclosure.
- NEVER store the Fun-kart in close proximity to appliances such as hot water heaters or furnaces.

 **WARNING**

NEVER operate the Fun-Kart while under the influence of alcohol, drugs, or medication of any kind.

- Such operation is dangerous to yourself and/or others.

 **CAUTION**

Brush Bars assembled to this Fun-Kart are for decorative purpose and limited brush protection.

- Brush Bars were not designed for roll over or to restrict all brush or tree branches from protruding into operator/passenger compartment.

 **CAUTION**

If the Fun-Kart should start making unusual noise or vibrating abnormally, the engine should be stopped and the spark plug wire disconnected. The vehicle should then be checked for damage. Excessive noise or vibration is generally a warning of loose or worn parts.

SOME WORDS ABOUT SAFETY

The following pages present important information and recommendations to help you drive your Kart safely. Please read through these pages thoroughly and view the Kart Safety DVD that was included with your unit.

SAFETY LABELS



The following labels have been applied to your Fun Kart and should be considered as permanent parts of the vehicle. If a label should come off, become hard to read, or become damaged, contact your dealer or Manco PowerSports Customer Service department for warning label replacements.



ATTENTION


Prior to operating vehicle, check and adjust tire pressure to the proper operating pressure as indicated on the sidewall of each tire.

11330-D

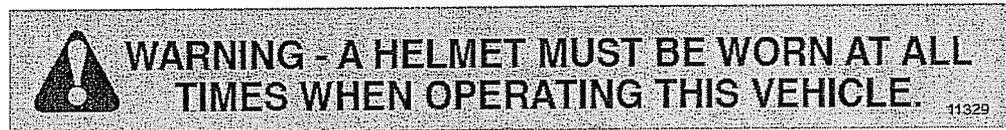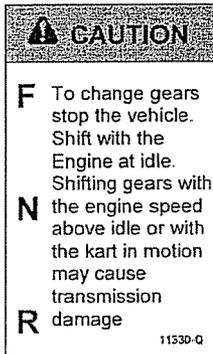

THIS KART IS NOT SUITABLE FOR A CHILD UNDER 12 YEARS
A Speed reduction kit is available for this kart.


11330-E

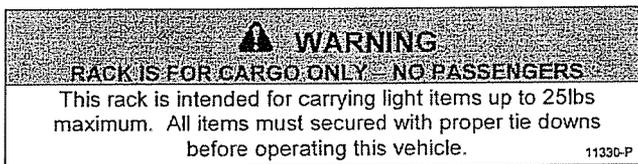

11330-P




11330-C

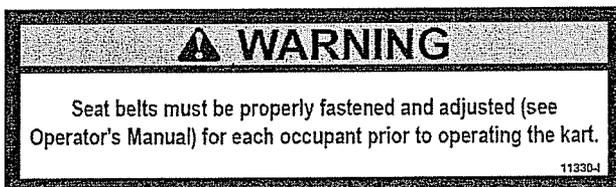

11330-J



11330-K

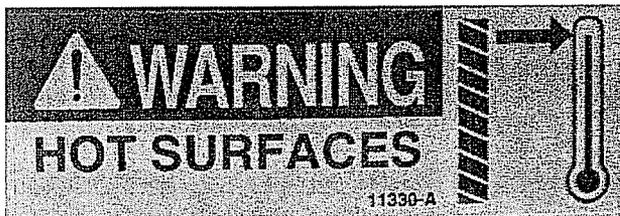

11330-A



11330-I

QUALIFICATIONS FOR FUN-KART USERS

This Fun-Kart is restricted to use by operator and passenger with a minimum age of twelve years. Fun-Karts are intended for use by operators who meet the physical and cognitive capabilities set out by the manufacturer in the material provided with the Fun-Kart. A 20mph speed reduction kit is available for this fun kart.

Consumer Responsibility for Safe Use and Maintenance of a Fun-Kart

1. Fun-Karts shall not be modified from the manufacturer's original design and configuration.
2. Fun-Karts shall not be used to perform racing, stunt riding, jumps, spinouts, donuts, or other maneuvers as they may cause loss of control. As such, these activities are likely to result in possible injury to the operator, bystanders, or both.
3. Prior to each use, the operator shall perform the preoperational checks specified by the manufacturer, and further verify:
 - a. Smooth throttle operation and positive return of the throttle linkage to a closed throttle position when released;
 - b. That the throttle cable and linkages operate properly and the throttle cable or other linkages be adjusted properly;
 - c. That the steering linkage is adjusted and operates smoothly;
 - d. That the engine stop switch is properly functioning;
 - e. That all guards originally supplied by the manufacturer are in proper place in serviceable condition;
 - f. That engine idle speed is below the point of clutch or torque converter engagement;
 - g. That the gas tank is in good condition and the proper gas cap is fastened securely;
 - h. That the braking system is functioning properly;
 - i. That all safety labels are in place, legible and understood;
 - j. That any and all axle guards, chain guards, torque converter covers, or other covers or guards supplied by the manufacturer are in place and in serviceable condition;
 - k. That tires are in good condition, inflated properly, and have sufficient tread remaining; and
 - l. That all fasteners are in place and tightened securely.
4. Fun-Kart engines shall not be started unless the operator is seated in proper position for vehicle operations and the brake fully engaged.
5. Long hair, loose clothes, or jewelry can get caught in moving parts below the seat or surrounding environment. Remove or tie back anything loose that can reach below or behind the seat before riding.
6. Fun-Karts shall only be fueled by a supervisor knowledgeable with regard to proper fueling techniques.
7. A supervisor shall verify personally that everyone operating or riding is knowledgeable, capable, and has the cognitive capacity to operate the Fun-kart safely, including those items specified in 1 through 6.
 - a. The supervisor shall only allow the use and operation of the Fun-Kart after demonstration that each operator can understand and operate all components of the Fun-Kart prior to use.
 - b. The supervisor shall provide continuous supervision during Fun-Kart use.
 - c. The supervisor shall not allow anyone to ride in or operate the Fun-Kart with long hair, loose clothes, or jewelry that can get caught in moving parts below the seat or surrounding environment. Remove or tie back anything loose that can reach below or behind the seat before riding.

8. Fun-Kart operators and passengers shall adhere to all manufacturer's recommendations and instructions, as well as comply with all laws and ordinances, as well as:
 - a. Operators shall stay seated with both hands on the steering wheel and both feet in the Fun-Kart at all times, whether moving or stationary, unless the Fun-Kart is stopped completely and the engine has been shut off.
 - b. Passengers shall remain seated with arms and legs inside the Fun-Kart at all times during Fun-Kart operation.
 - c. Shall observe minimum age restrictions.
 - d. Shall not ride the Fun-Kart if long hair, loose clothes, or jewelry reach below or behind the seat.

 **WARNING**

Long hair, loose clothes, or jewelry can get caught in moving parts below and behind the seat or surrounding environment. Remove or tie back anything loose that can reach below or behind the seat before riding.

- e. Shall not allow smoking in Fun-Kart.
 - f. Persons under the influence of drugs, alcohol, or intoxicants shall not supervise, operate, or ride in a Fun-Kart.
 - g. Fun-Karts shall operate only on a surface or terrain recommended by the Fun-Kart's manufacturer.
 - h. Fun-Karts shall not be operated on roads, streets, highways, or any other location where road vehicles are intended to travel.
 - i. Fun-Karts shall be operated only with adequate lighting and under conditions of suitable visibility.
9. Persons with the following conditions shall not ride in or operate a Fun-Kart:
 - a. Those with heart conditions
 - b. Pregnant women
 - c. Persons with head, back, or neck ailments, or prior surgeries to those areas of the body.
 - d. Persons with any mental or physical conditions, which may make them susceptible to injury or impair their physical dexterity or mental capabilities to recognize, understand, and perform all of the safety instructions, and be able to assume the hazards inherent in Fun-Kart use.
 10. Fun-Kart shall not be used to:
 - a. Transport a passenger except in the seating area provided.
 - b. Transport materials or equipment;
 - c. Transport animals.
 11. Fun-kart operators always shall use appropriate protective clothing, including but not limited to a motorcycle type helmet and eye protection, with appropriate certification, and any other equipment recommended by the Fun-Kart manufacturer including gloves, footwear, long sleeve shirts, and long pants.
 12. No operator or other person shall contact any portion of the engine, wheels, or drive train for any purpose including maintenance until the engine has been turned off and allowed to cool, and the Fun-Kart is in a stable and stationary position.
 13. Passenger restraints must be used in accordance with, and limited to, the manufacturer's guidelines.
 14. Fun-Kart components shall be maintained and repaired in accordance with the manufacturer's specifications and utilizing only the manufacturer's authorized replacement parts with installation performed by designated dealers or other skilled persons.

ARE YOU READY TO DRIVE?

Before each drive, you need to make sure that you and your kart are both ready to drive. To help get you prepared, this section discusses how to evaluate your driving readiness, what items you should check on your kart, and adjustments to make for your comfort, convenience, or safety. Before you drive your kart for the first time, we urge you to:

- Read this owner's manual and the labels on your kart carefully.
- Make sure you understand all the safety messages.
- Know how to operate all the controls.
- View and understand the included safety DVD

Protective Apparel

Although complete protection is not possible, wearing proper gear can reduce the chance of injury should you have an accident. The following suggestions will help you choose the proper protective gear.

Helmet and Eye Protection

Your helmet is your most important piece of protective gear because it offers the best protection against head injuries. A helmet should fit your head comfortably and securely.

Open-face helmets offer some protection, but a full-face helmet offers more. Regardless of the style, look for a D.O.T. (Department of Transportation) or Snell Memorial Foundation (SNELL) sticker on any helmet you buy. Always wear a face shield or goggles to protect your eyes and help your vision.

WARNING

Operating this kart without wearing an approved motorcycle helmet, eye protection, and protective clothing could increase your chances of head and/or eye injury, and the possibility of death in the event of a severe accident.

Always wear an approved motorcycle helmet that fits properly and wear eye protection (goggles or face shield), gloves, boots, long-sleeved shirt or jacket and long pants.

Additional Driving Gear

In addition to a helmet and eye protection, we also recommend:

- Sturdy off-road motorcycle boots to help protect feet, ankles, and lower legs.
- Off-Road motorcycle gloves to help protect your hands
- Driving pants with knee and hip pads, a driving jersey with padded elbows, and chest protection.

Driver Training

Developing your driving skills is an ongoing process. Even if you are an experienced driver, take time to become familiar with the kart controls and how the kart handles. Practice driving in a safe, open area to develop your skills. Do not drive on rough terrain until you get accustomed to the kart controls and feel comfortable with its size and weight.

 **WARNING**

Operating this kart without your seat belt could cause you to be thrown from the kart, causing serious injury or death.

No Alcohol or Drugs

Alcohol, drugs and karts don't mix. Even a small amount of alcohol can impair your ability to operate a kart safely. Likewise, drugs, even if prescribed by a physician, can be dangerous while operating a kart. Consult your doctor to be sure it is safe to operate a vehicle after taking medication.

 **WARNING**

Operating this kart after consuming alcohol or drugs can seriously affect your judgment, cause you to react more slowly, affect your balance and perception, and could result in serious injury or death. Never consume alcohol or drugs before or while operating this kart.

IS YOUR VEHICLE READY TO DRIVE?

Before each drive, it is important to inspect your kart and make sure any problems you find are corrected. A pre-drive inspection is a must, not only for safety, but because having a breakdown, or even a flat tire, can be a major inconvenience.

If your kart has overturned or has been involved in a collision, do not drive it until your kart has been inspected by your dealer. There may be damage or other problems that you cannot see.

 **WARNING**

Improperly maintaining this kart or failing to correct a problem before driving can cause an accident resulting in serious injury or death.

Always perform a pre-drive inspection before every drive and correct any problems.

Pre-Ride Inspection

The following checklist should be utilized to inspect your vehicle before each use to ensure that it is in proper working order.

ENGINE STOPPED CHECKLIST

	ITEM	INSPECTION PROCEDURE	ACTION
1.	Engine Oil Level	Add oil if required. Check for leaks. Tighten filler cap securely.	Refer to operator's manual.
2.	Fuel level	Add fuel if necessary. DO NOT overfill. DO NOT mix oil with gas. Replace cap tightly.	Refer to operator's manual. DO NOT refuel a hot engine. Allow engine to cool before adding fuel.
3.	Warning Decals	Make sure all warning decals are legible and securely attached.	Replace as necessary.
4.	Tires	Tread must have a minimum height of 1/8" at center of tire. Prior to operating vehicle, check and adjust tire pressure as indicated on the sidewall of each tire. A tire pressure gauge is required to obtain accurate readings.	Replace tires if tread height is less than 1/8" at center of tire. Add or remove air as necessary to meet requirements indicated on sidewall of each tire.
5.	Drive Train	Check condition and tension	Lubricate, adjust tension as necessary.
6.	Throttle	Check for smooth operation. Ensure throttle 'snaps' back to idle. Check for frayed or loose cable. Check for mud, debris, and ice in throttle mechanism	Replace damaged cable. Clean out any mud and debris. If ice is present, move Fun-kart to a warm place and allow the ice to melt and water to dry.
7.	Fasteners	Check wheels to see that all axle nuts are tightened securely. Check for missing fasteners. Check that all other fasteners are secure.	Tighten fasteners as necessary. Replace fasteners as necessary
8.	Brush bars	Make sure all brush bars are in place and securely attached.	Replace damaged bars or fasteners and tighten as necessary.
9	Steering	Make sure steering turns freely Check for proper 'toe-in' of wheels.	Lubricate and adjust as necessary.
10.	Frame / Chassis	Check for bent or otherwise damaged frame and/or other chassis components.	Replace as necessary.
11.	Battery	Check that the connections are tight and free of corrosion. Check that the battery is secured in place.	Clean / tighten as necessary.
12.	Guards	Check all guards covering moving parts.	Tighten fasteners on loose guards. Replace worn or damaged guards.

	ITEM	INSPECTION PROCEDURE	ACTION
13.	Lights	Check for proper operation	See OPERATION – Control Console
15.	Ball Joints	Check fasteners are tight, check that all cotter pins are in place. Check for ball looseness	See MAINTENANCE - Chassis

ENGINE STARTED CHECKLIST

	ITEM	INSPECTION PROCEDURE	ACTION
1.	Stop Switch	Perform stop switch test.	Repair / replace as necessary.
2.	Throttle	Check idle adjustment.	Adjust as necessary.
3.	Brakes	Ensure brakes function properly.	Adjust / replace as necessary.

Correct any discrepancies according to this Operator's Manual before riding. If the problem cannot be corrected, contact an authorized dealer for assistance or call 1-800-643-7332 for Customer Service.

SAFE DRIVING PRECAUTIONS

Off-Road Use Only: Your kart and its tires are designed and manufactured for off-road use only, not for use on paved surfaces. Driving on paved surfaces can affect the kart handling, control, and cause excessive wear to your tires.

WARNING

Operating this kart on paved surfaces may seriously affect handling and control of the kart, and may cause the vehicle to go out of control.

When driving off-road, also remember to always obey local off-road driving laws and regulations. Obtain permission to drive on private property. Avoid posted areas and obey "NO TRESPASSING" signs.

You should never drive your kart on public streets, roads or highways, even if they are not paved. Drivers of street vehicles may have difficulty seeing and avoiding you, which could lead to a collision.

WARNING

Operating this kart on public streets, roads or highways could result in a collision with another vehicle. Never operate this kart on any public streets, roads or highways, whether they are dirt, gravel or paved surfaces.

Keep Hands and Feet on Controls

When driving your kart, always keep both hands on the steering wheel and both feet on the foot controls. It is important to remain alert and remain focused when driving the kart. Removing hands or feet away from the controls can reduce your ability to react and maintain control of the kart.

WARNING

Removing your hands from the steering wheel or feet from the foot controls during operation can reduce your ability to control the kart and could result in a collision. Always keep both hands on the steering wheel and both feet on the foot controls of your kart during operation.

Control Speed

Driving at excessive speeds increases the likelihood of an accident. In choosing an appropriate speed, you must consider the capability of your kart, the terrain, visibility and other operating conditions, in addition to the skill and experience of the driver.

WARNING

Operating this kart at excessive speeds increases your chances of losing control of the kart, resulting in an accident. Always drive at a speed that is appropriate for your skill, your kart, the terrain, visibility and other operating conditions.

Use of this Kart on Unfamiliar or Rough Terrain

Before driving in an unfamiliar area, always check the terrain thoroughly. Don't drive fast on unfamiliar terrain or when visibility is limited (it is often difficult to react to hidden obstructions like rocks, bumps, or holes).

WARNING

Failure to use extra care when operating this kart on unfamiliar terrain could result in the kart overturning or going out of control. Go slowly and use extreme caution when operating on unfamiliar terrain. Always be alert to changing terrain conditions when operating the kart.

Never drive past the limit of visibility. Maintain a safe distance between your kart and other off-road vehicles. Always exercise caution and use extreme care on rough, slippery and loose terrain.

WARNING

Failure to use extra care when operating on excessively rough, slippery or loose terrain could cause loss of traction or vehicle control, resulting in an accident or overturn. Do not operate on excessively rough, slippery or loose terrain until you have learned and practiced the skills necessary to control the kart on such terrain. Always be especially cautious on these types of terrain.

Do Not Perform Stunts

You should always operate your kart in a safe and reasonable manner. When driving, always keep all four wheels on the ground.

WARNING

Attempting wheelies, jumps, and other stunts increase the chances of an accident, including an overturn. Never attempt stunt riding of any type and ride responsibly. Don't try to show off.

KART OPERATION

Operation controls

WARNING

Do not attempt to start or operate the engine until completely familiar with the location and use of each control necessary to operate this vehicle. The operator must know how to stop this machine before starting and driving it.

A. Throttle

The right foot pedal is the throttle, controlling the speed of the kart. As the engine speed increases above idle, the clutch automatically engages and moves the vehicle forward. To disengage the clutch at any time, allow the throttle to return to the idle position. (See Fig Below)

WARNING

Every time, prior to starting the engine, check the throttle assembly to ensure that when the pedal is pushed all the way forward the assembly is working smoothly and returns to idle when released. Do not operate this unit if pedal or engine throttle linkage fail to return to the idle position. If unable to correct the problem through lubrication, adjustment or replacement of worn parts, contact your dealer for assistance.


B. Brake

The brake is controlled by the left foot pedal (See Figure). Applying pressure to the pedal draws the brake pads against the brake disc at the wheels and slows or stops the kart.

Your kart is also equipped with a cable operated parking brake feature. To apply the brake, simply pull back on the parking brake lever and lock it into position.

D. Lights

This kart is equipped with both front running lights and a rear running/brake lamp. To turn the lights on, flip the switch

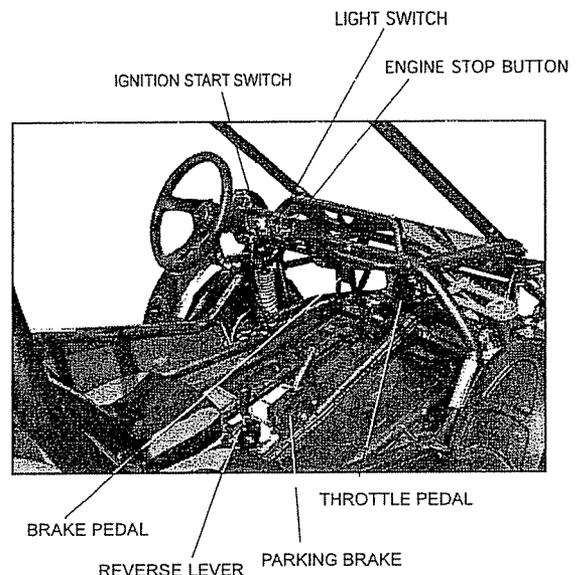

located next to the ignition switch on the dashboard of the unit. The rear brake light will activate automatically when the brake pedal is depressed.

 **WARNING**

The lights on this unit are designed for daytime use only and are intended to increase the visual awareness of this vehicle during daytime use. The lights are not intended for nighttime operation of the kart.

E. Engine Starting

With the unit shifted into the "NEUTRAL" gear, and with the parking brake applied, insert the key into key-switch. Turn the key clockwise, and release the key when the engine starts. **NOTE: Your Fun-Kart is equipped with (2) engine stop switches, one located on the dash and one located on the engine electrical cover. BOTH switches must be in the "RUN" position for the engine to start.** The engine will warm up within 5 minutes and the choke will close automatically allowing the engine to operate at the normal RPM (**Warning: Don't crank starter more than 5 seconds at one time**).

 **CAUTION**

This unit has been shipped with a special BREAK-IN oil pre-filled in the engine crankcase. This oil **MUST** be changed after 5 hours of operation. Replace with a 10W40 weight motor oil as described in the *SERVICE* section of this manual.

F. Engine Stop Switch

Before driving this vehicle, test the Engine Stop Switch to ensure that it is operating properly. With the engine running, push the Engine Stop Switch to the depressed position to shut down the engine.

NOTE: The key switch should always be turned to the "OFF" position when the kart is not in use to prevent draining the battery.

G. Rear View Mirror

The unit is equipped with a rear view mirror. Adjust the mirror such that objects can be easily seen while sitting in correct driving position.

H. Seat Adjustment

The unit is equipped with an adjustable drivers seat. To adjust, lift the lever just in front of the seat bottom (between the drivers legs) and move the seat either forward or backward. Release the lever at the desired seat location, ensuring that the lever snaps back into place to lock the seat.

 **WARNING**

Never operate this kart when the seat is not securely locked into position. Serious injury or death could occur due to loss of control. Always make seat adjustments with the kart fully stopped and the engine shut off.

I. Occupant Restraints

This kart is equipped with 3 point retracting seat belts. Insert the metal tongue into the buckle until it is securely attached. Final adjustments should be made with the plastic tension stop such that the belt is against the shoulder and chest with no excess slack. This kart is also equipped with a passenger grab bar located on the dash directly in front of the passenger seat.

J. Rear Cargo Rack

This kart is equipped with a rear cargo rack. The rack should be used for transporting small items, however, the items **MUST** be securely tied down with adequate straps or cords. Additionally, never exceed the rated load of 25lbs.

WARNING

Failure to properly tie down loose items and exceeding the maximum rating of the cargo rack may cause serious injury or death.

K. Gear Selection


This kart is equipped with a Drive / Neutral / Reverse transmission. To shift gears, bring the kart to a complete stop and let the engine RPM drop to the idle level. Move the shift lever to the desired gear and gently depress the throttle pedal.

CAUTION

Damage to the fun kart will occur if the unit is shifted into a different gear while the kart is still in motion. **ALWAYS** bring the kart to a complete stop before selecting a different gear.

L. Steering Adjustment

This kart is equipped with an adjustable tilt steering feature. To adjust, loosen the adjusting knob (A) until the steering column can move up and down. Select the appropriate setting and re-tighten the adjusting knob.

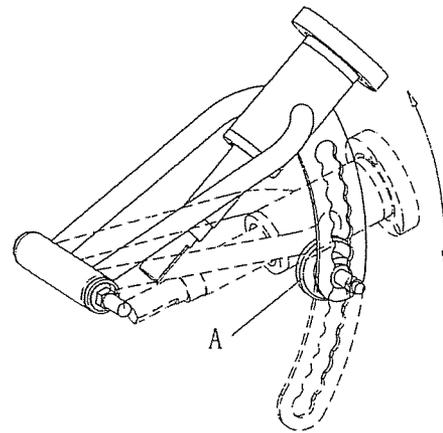


Steering Adjustment

WARNING

Do not operate the kart without ensuring that the steering adjustment knob is securely tightened. Serious injury or death could occur due to loss of control or rollover.

KART FEATURES AND LOCATIONS

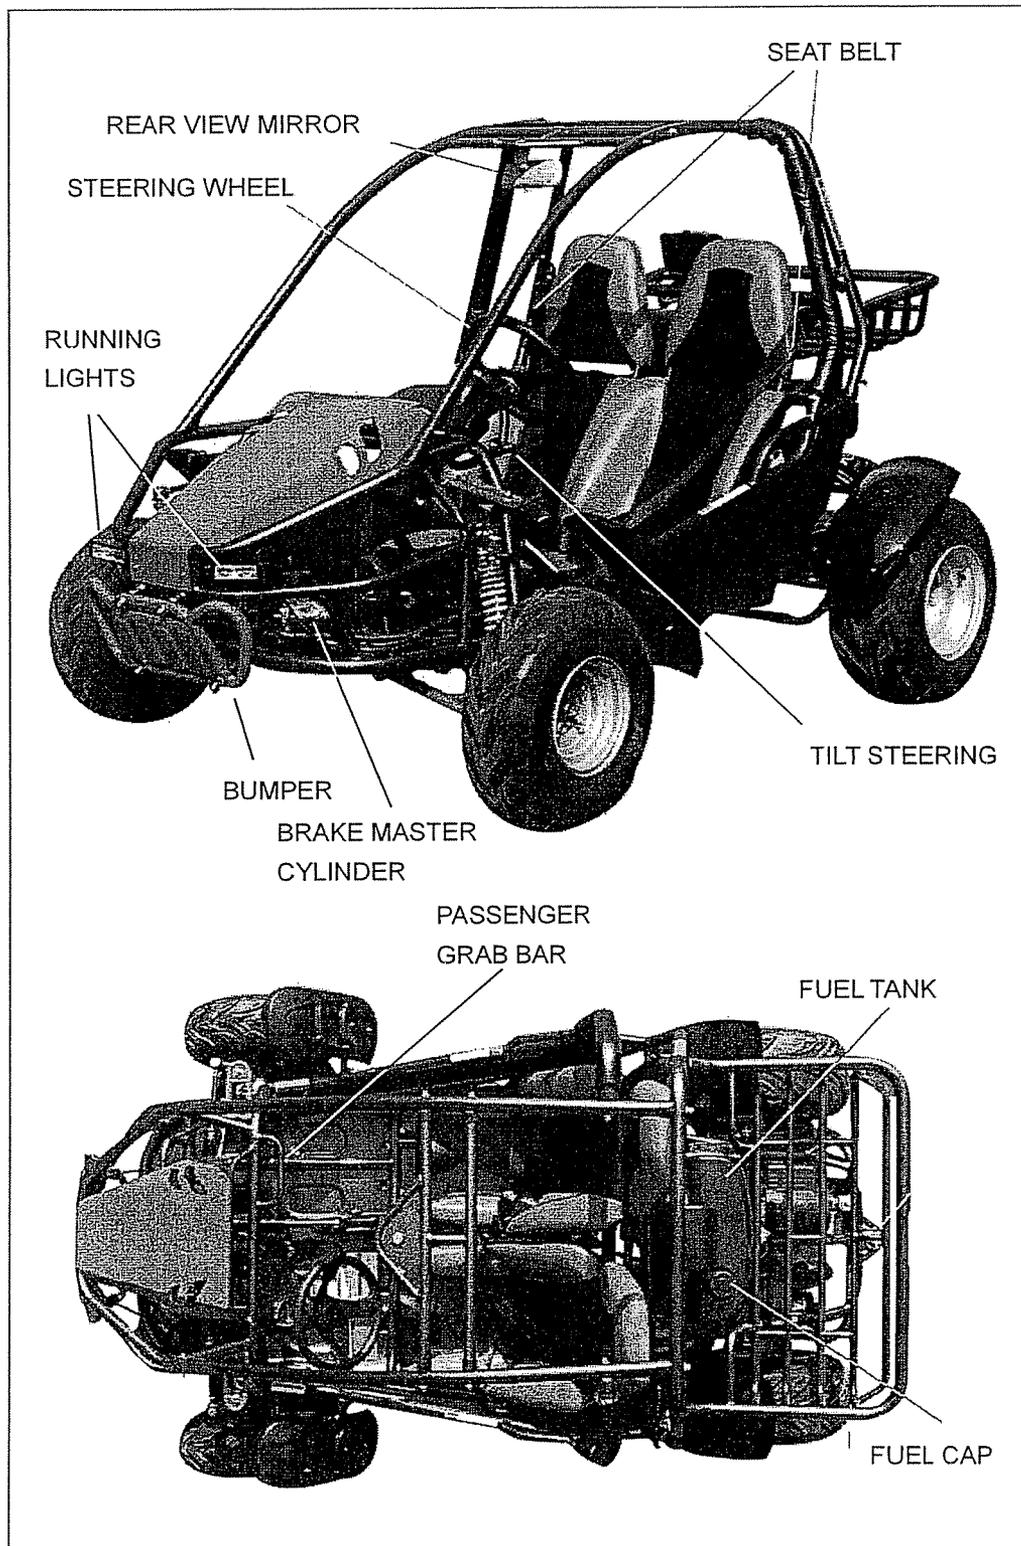


SERVICE INSTRUCTIONS

A. Air Cleaner

This unit is equipped with a paper style air filter element and should be replaced after every 20 hours of operation (Ref Figure).

NOTE: *Operation in unusually dusty conditions may require more frequent replacement.*

- 1) Remove the air cleaner cover (1) by removing the Phillips head screws.
- 2) Clean any excess dirt, oil, or dust from the air cleaner box with a mild detergent and water solution.
- 3) Thoroughly dry the air box
- 4) Replace the air cleaner element (2)
- 5) Carefully align the gasket between the air box halves during re-assembly

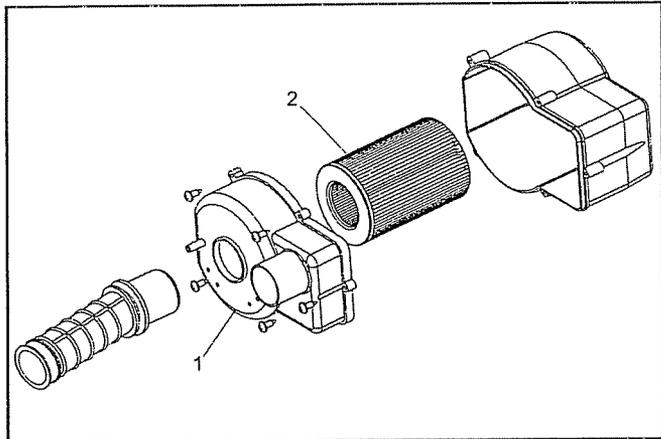

B. Engine Lubrication

You **MUST** change the oil in the crankcase after the first 5 hours of operating a new engine. The engine oil should then be changed every 10 hours of use thereafter. This will insure proper lubrication of the internal parts and prevent costly repairs due to excessive wear.

CAUTION


This unit has been shipped with special BREAK-IN oil pre-filled in the engine crankcase. This oil **MUST** be changed after 5 hours of operation. Replace with SAE 10W40 weight motor oil as described in the *following section*.

WARNING




Used oil **MUST** be disposed of at a proper collection center

- a. Remove the drain plug located on the bottom of the right rear side of engine. Elevating the front of the kart slightly will help drain all of the oil.
- b. The oil should be emptied into suitable container for recycling.
- c. Remove and clean the oil screen.
- d. With the oil completely drained, replace the drain plug and tighten securely.
- e. Place the kart back onto a flat surface to level the engine, and Re-fill the crankcase with 30oz of SAE 10W40 motor oil.
- f. Check the oil level using the dipstick attached to the oil

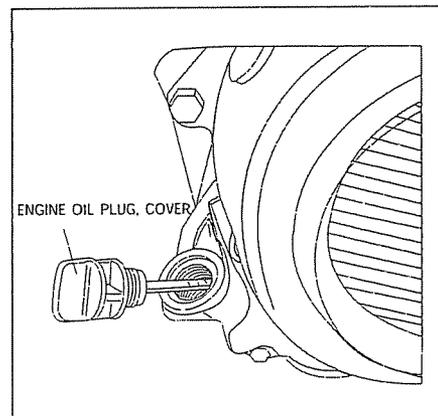

plug cap. Be sure to check the oil level before each use of the kart. Add oil when necessary to keep the oil level between the bottom of the dipstick and the "O" mark. **NOTE: Oil level should be checked by dipping the oil level stick into the crankcase WITHOUT screwing the cap in.**


- g. Some units are equipped with a remote oil cooler (1) and filter (2) located just behind the driver seat under the battery tray. If your unit has this option, the screw on style oil filter (2) should be replaced as well. With the oil drained from the crankcase (Refer to step d), unscrew the oil filter and replace. Ensure that the oil filter gasket (3) is properly located and in good condition. Do not over tighten the oil filter.

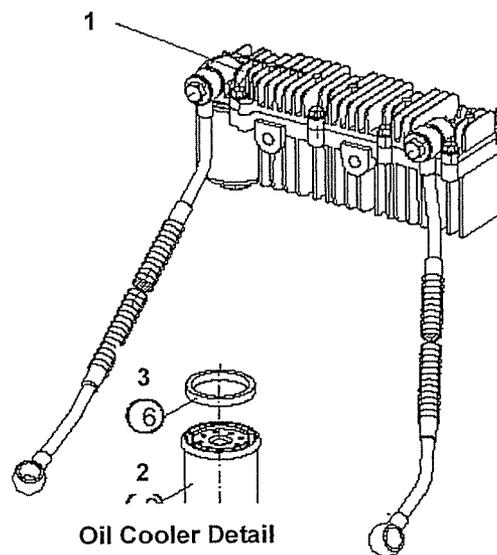

Oil Cooler Detail

C. Spark Plug

- Remove the spark plug and inspect it each time you change the oil (Use a spark plug wrench). The electrodes should be kept clean and free of carbon. The presence of carbon or excess oil will greatly reduce engine performance. If possible, check the spark plug gap (area between the electrodes) using a wire feeler gage or spark plug gap tool.
- Correct gap is 0.6 - .07mm**
- Before installing the spark plug, coat the threads lightly with graphite lubricant to ensure easier removal of the plug in the future.
- Spark plug should be replaced once a year for optimum engine performance.

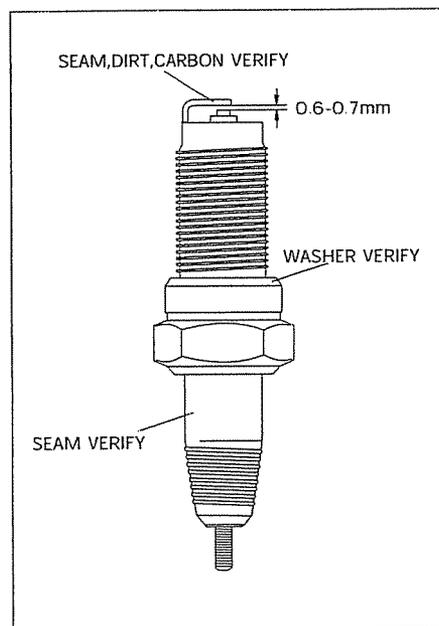


D. Carburetor Adjustment

All the necessary carburetor adjustments have been made at the factory, and the recommended settings are correct for most applications. To adjust the engine idle setting on the carburetor:

- Allow the engine to warm up for 5-10 minutes
- Using a Phillips screwdriver, adjust the idle screw (B) until the engine settles at approximately 1400RPM

NOTE: For further carburetor adjustments, refer to the Service Manual available for purchase from your Dealer or by calling Manco PowerSports customer service.

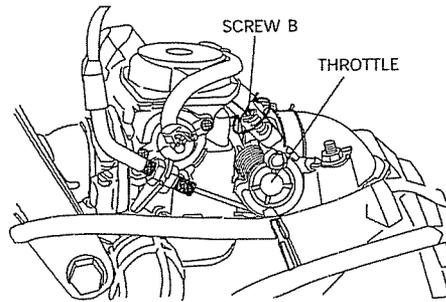

Carburetor Idle Adjustment Detail

E. Cleaning Instructions


Keep your kart clean by using a clean rag and a mild detergent and water solution. Wipe off all dirt and oil from around the controls. Wipe off any spilled fuel and oil. Keep the engine clean and clear of foreign objects, especially those around the air intake fan and air inlet ductwork.

F. General Lubrication

Lubricate the vehicle at least every 90 days, and more often, if the kart is used daily or in unusually dusty conditions. Lubrication of the front suspension should be performed by adding fresh axle grease, with a grease gun, to the fittings located on each A-Arm.

G. Chain Lubrication and Adjustment

For optimum chain life, regular lubrication with a spray on chain lubricant should be performed on a regular basis. (Ref Figure below)

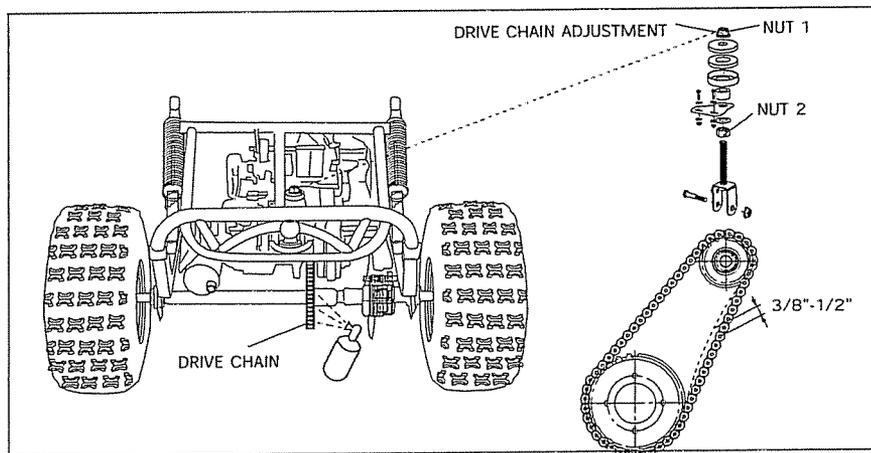

A new chain will have initial stretch and therefore will require adjustment. The first chain adjustment should be made after the first 2 hours of use. If the chain has more than 1/2" of slack or "flex" than it will require adjustment. To adjust:

- a. Loosen Nut (1).
- b. Adjust nut (2) on the underside of the tube.
- c. Re-tighten Nut (1) until the proper chain tension is achieved.

H. Adjustment of Front and Rear Shock


There are five adjustable positions on each shock.

The center notch is the default position as set by the manufacturer (Ref Figure). Use a round nut wrench to adjust the shock.

To INCREASE the shock stiffness, rotate the ring to the highest (longest) setting.

To DECREASE the shock stiffness, rotate the ring to the lowest (shortest) setting.

Shock stiffness adjustments should be made based on the overall weight of the rider and occupant.

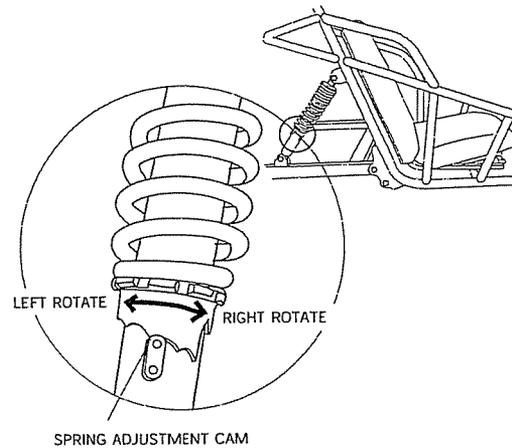


Shock Adjustment

J. Shifter Adjustment

Your unit may require an occasional adjustment in the shift cables due to typical stretch found during normal operation of the kart. To make shift adjustments refer to the following procedure:

- Push the shift lever to the "D" position
- Check the restriction control disc found just behind the oil level dipstick to ensure that it has rotated forward all the way (looking for any slack in control cable #1)
- Loosen adjustment nuts #1 and #2, pulling the housing to draw the cable tight. Re-tighten the nuts when the cable is properly tensioned.
- Shift the lever to the "R" position and check the control disc to ensure that it has rotated full towards the rear of the kart.
- Loosen adjustment nuts #3 and #4, pulling the cable housing to draw the #2 control cable tight.
- Re-tighten nuts #3 and #4 when the cable is properly tensioned.

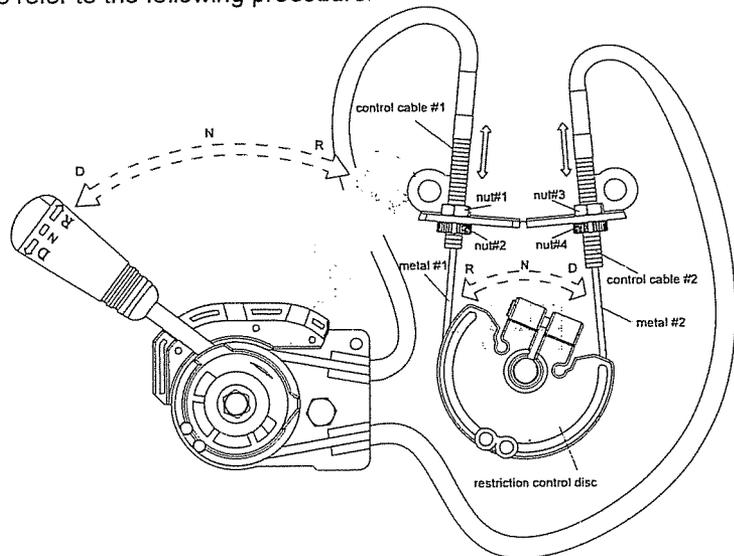

K. Storage Instruction

If you plan to store (and not operate) your kart for a period in excess of 30 days, or at the end of each driving season, the unit should be set up for storage as follows:

- Drain fuel tank and carburetor by allowing the engine to run completely out of fuel.
- Lubricate the engine cylinder by removing the air cleaner and spraying an engine fogging oil through the carburetor.
- Do NOT save or store gasoline over the winter. Using old gasoline, which will deteriorate from storage, will make the engine difficult to start and affect the performance of the engine.
- Remove the battery from the unit and apply a periodic trickle charge to maintain the battery at a proper voltage level for the next riding season.
- To protect the paint, plastics and upholstery, it is a good idea to keep the unit covered when not in use.

GENERAL MAINTENANCE

A. Front Wheel Replacement


Do not disassemble the castle nuts when you replace the front wheels. It is only necessary to remove the 4 lug nuts to remove the wheel. (See Figure)

Tighten the nuts securely after replacing the wheels.

B. Rear Wheel Replacement

Do not disassemble the castle nuts when you replace the rear wheels. It is only necessary to remove the 4 lug nuts to remove the wheel. (See Figure)

Tighten the nuts after replacing the wheels.

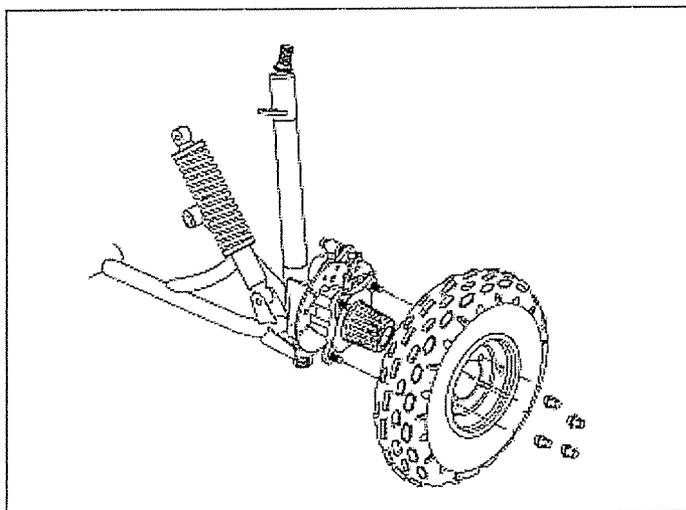


Front and Rear Wheel Attachment

C. Front Wheel Alignment (Ref Toe Adjustment Diagram)

The front wheels should be set with a "toe-in" from 1/8" to 1/4". At the centerline of the tires, measure the Distance A and the Distance B. For proper toe adjustment, Dimension A should be 1/8" – 1/4" greater than Dimension B.

To make adjustments:

- a. Loosen the lock nuts on both sides of Front Tie Rods.
- b. Ensure the steering wheel is centered, and adjust Dimension B by equally rotating the tie rods in or out with a 12mm wrench.
- c. After adjusting to the desired length, tighten the lock nut against the rod end.
- d. Recheck the dimensions for proper alignment.

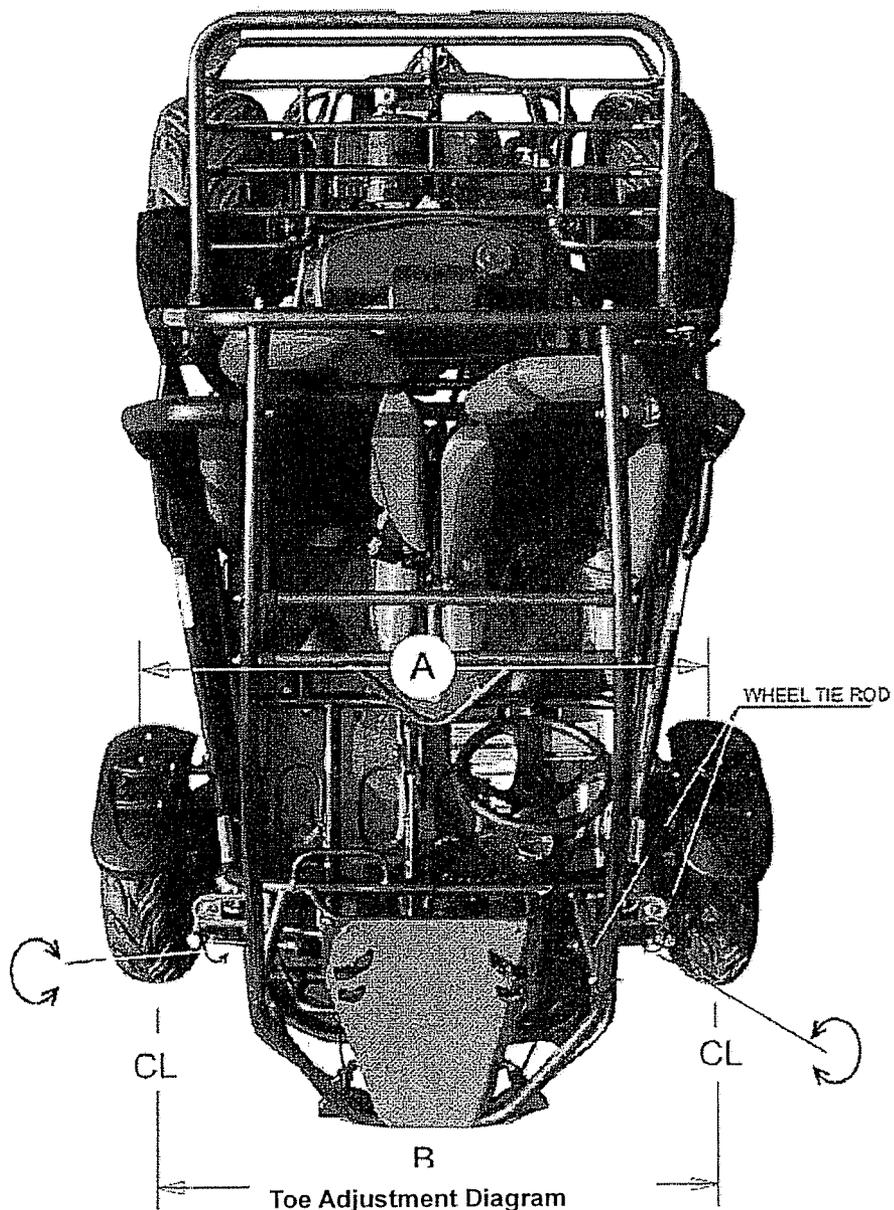

D. Optional Speed Reduction Installation

This kart has been equipped with provision for a speed limiter to reduce the overall speed of the unit to 20mph max. This kit is available from your dealer or directly from Manco PowerSports by calling customer To install the speed limiter:

- a. Remove the electrical control box cover located on the rear swingarm, just next to the air box, using a Phillips screwdriver.
- b. Locate the open 2 wire plug, and install the rev limiter box provided in the kit.
- c. Replace the electrical box cover, being careful not to smash or crush wires and connections.

REPLACEMENT PARTS AND SERVICE

Most replacement parts are typically available from your dealer. Because of immediate availability and convenience, it is recommended that replacement parts be ordered from an authorized dealer. Take this manual and all supplements to the dealer when ordering parts in person.

If replacement parts are not available from a dealer, they may be ordered directly from Manco PowerSports at 1-800-643-7332. Orders may be subject to a minimum fee. A listing of authorized service center locations in your area are also available from our Customer Service department.

Record the vehicle VIN number in the spaces provided at the front of this manual. The VIN number is hard tagged on the kart and can be found just behind the drivers seat.

SPECIFICATIONS

Dimensions

Overall Length -----	85.0 in. (2160mm)
Overall Width -----	55.4 in. (1406mm)
Overall Height -----	57.4 in. (1458mm)
Wheelbase -----	59.0 in. (1500mm)
Front Track -----	47.7 in. (1160mm)
Rear Track -----	39.4 in. (1000mm)
Ground Clearance -----	6.7 in. (170mm)

Engine

Type -----	Single Cylinder Oil & Air cooled 4-Stroke
Engine capacity -----	150cc
Bore / Stroke -----	57.4mm x 57.8mm
Displacement -----	149.6 cm ³
Corrected compression ratio -----	9.2:1
Carburetor -----	KF, CB24J
Output Power -----	9.9 hp @ 7500rpm
Maximum Torque -----	13 ft-lbs @ 5500rpm
Starting -----	Keyed Electric
Ignition -----	CDI
Lubrication -----	Force & Splash SAE-10W/40
Transmission -----	CVT automatic with Neutral and Reverse
Spark plug -----	C7HSA (NGK)
Plug gap -----	0.6-0.7mm
Fuel Type -----	Mid-Grade Unleaded (89 Octane)

Capacities

Maximum load (Driver, Passenger, & Gear) ----- 400lbs
 Fuel tank ----- 2.64 Gal
 Engine oil ----- 30 Oz
 Climbing Angle ----- 20° - 25°
 Battery ----- 12V 10Ah
 Head Light ----- 12V 35W
 Tail Light ----- 12V 21W/5W
 Fuse ----- 15A
 Top speed (20mph Speed Reduction Kit Available) ----- 35 - 39mph

Miscellaneous

Brakes (Front & Rear) ----- Hydraulic Disc
 Front tire ----- 19 x 7-8 @ 15psi
 Rear tire ----- 21 x 10 -10 @ 10psi
 Front Suspension ----- Independent Dual A-Arm
 Rear Suspension ----- Swing Arm/Double Oil Damped Shock
 Restraint System ----- 3-Point Retractor Style Belt
 Final Drive Chain ----- KMC #50 - 5/8" Pitch
 Net Weight ----- 522 lbs


Periodic Checks & Services

The maintenance intervals in the following table are based upon average driving conditions. Driving in unusually dusty areas may require more frequent servicing.

Item	Initial Service (First Week)	Monthly	Quarterly	Yearly
Tire Pressure / Wear	I	I		
Brake System	I	I		
Fastener Tightness	I	I		
Air Cleaner		R		
Carburetor	I			C
Spark Plug			C, A	R
Brake Fluid	I	I		
Gearbox Oil		I		
Engine Oil	R (5hr)	R (every 10hr)		
Chassis		C, I	L	
Fuel Filter		I		R
Battery			I	

A = Adjust, C= Clean, I = Inspect, L= Lubricate, R= Replace

ELECTRICAL SCHEMATIC

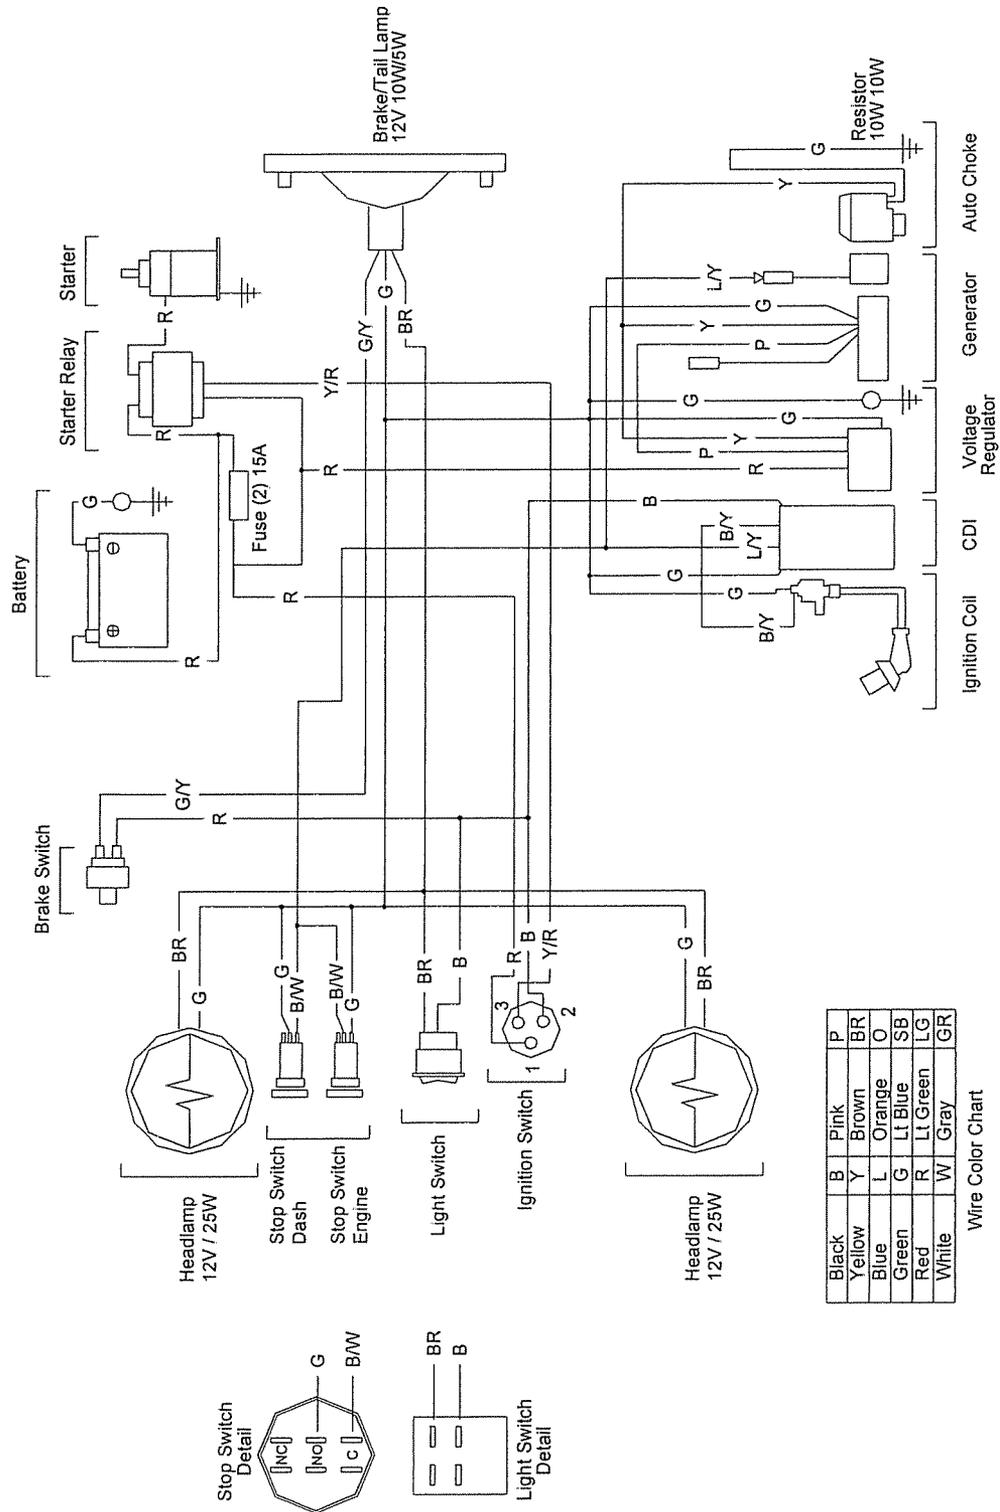


7150 Electrical Schematic

Illustrated Parts Manual

7150

150cc Fun Kart

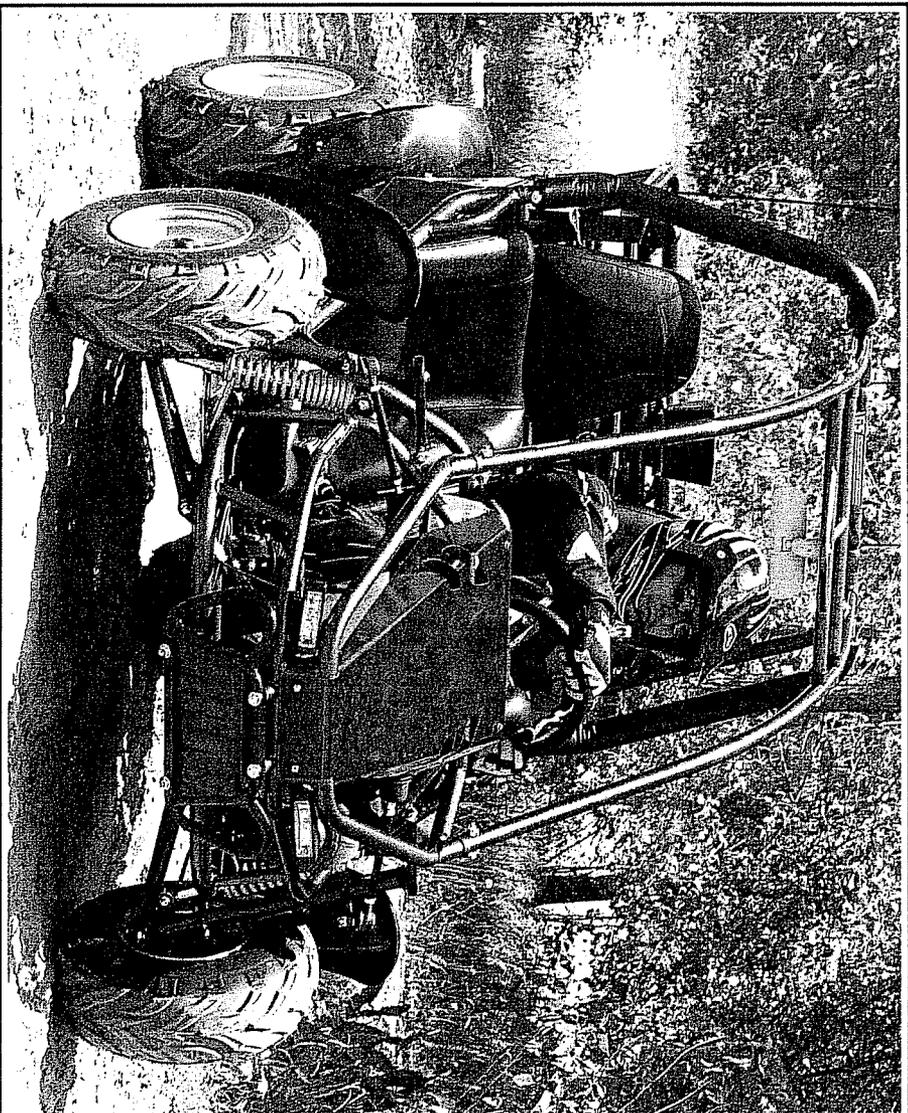

RECOMMENDED MINIMUM OPERATOR AGE: 12


THIS VEHICLE IS FOR OFF-ROAD USE ONLY

THIS VEHICLE IS NOT DESIGNED FOR USE ON RENTAL TRACKS OR RACING

BEFORE OPERATING THIS VEHICLE, THE OWNER AND EACH OPERATOR MUST UNDERSTAND THIS VEHICLE WAS NOT DESIGNED OR MANUFACTURED TO MEET SPECIFICATIONS FOR USE ON PUBLIC ROADS, STREETS, HIGHWAYS, AND THOROUGHFARES. THE OWNER AND EACH OPERATOR MUST READ AND UNDERSTAND ALL THE INSTRUCTIONS FOR PROPER ASSEMBLY AND SAFE OPERATION, AS WELL AS THE INSTRUCTIONS CONCERNING THE ENGINE AND ALL OTHER PORTIONS OF THIS VEHICLE. CHILDREN MUST BE OF AGE 12 OR OLDER AND SUPERVISED BY AN ADULT AT ALL TIMES WHEN USING THIS FUN-KART.


Section 1 - Cylinder Head Asm

Ref No	Part No	Description	QTY
1	14254	Head, Cylinder - 150cc	1
2	50304	Plug, Spark - NGK C7HSA	1
3	14255	Gasket, Cylinder Head - 150cc	1
4	14256	Gasket, Carb Insulator - 150cc	1
5	14257	Insulator, Carb - 150cc	1
6	14258	Manifold, Intake - 150cc	1
7	14259	Clamp, Carb Hose - 150cc	1
8	14260	Gasket, Valve Cover - 150cc	1
9	14261	O-Ring, M27x2 Rubber	1
10	14262	Tube, Breather - 150cc	1
11	14263	Stud, M6 x 1.00 x 18	2
12	14264	Stud, M6 x 1.00 x 50	2
13	50003	Bolt, M6 x 1.00 x 25 FHCS	4
14	50024	Nut, M6 x 1.00 Hex Flange	2
15	14265	Cover, Valve - 150cc	1
16	14266	Pin, M10 x 16 Dowel	2
17	50087	Bolt, M6 x 1.00 x 100 FHCS	2
18	14267	Valve, Intake - 150cc	1
19	14268	Seal, Valve Stem - 150cc	2
20	14269	Seat, Valve Spring Outer - 150cc	2
21	14270	Spring, Outer and Inner Valve - 150cc	2
22	14271	Retainer, Valve Spring - 150cc	2
23	14272	Keeper, Valve Spring - 150cc	4
24	14273	Valve, Exhaust - 150cc	1

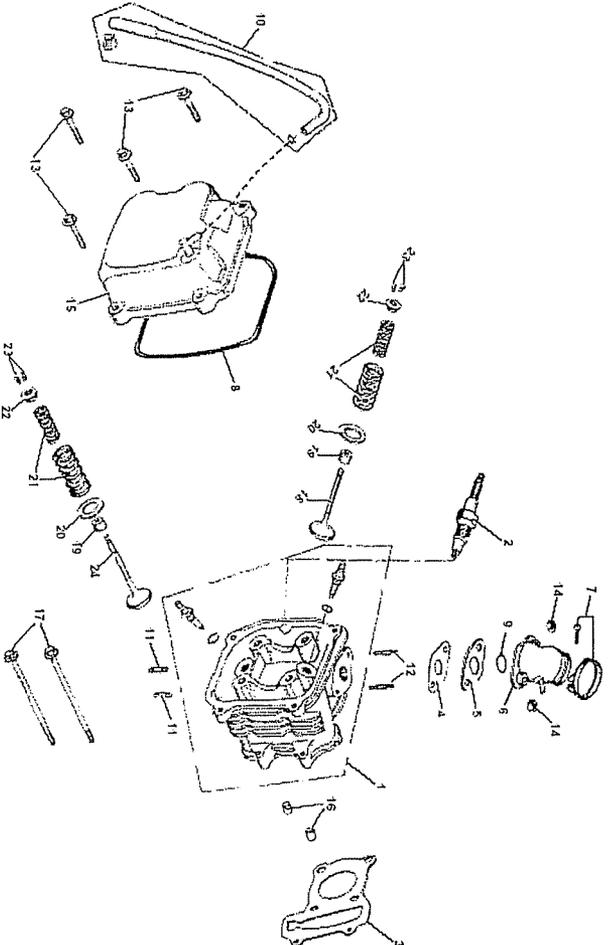


Section 2 - Cylinder

Ref No	Part No	Description	QTY
1	14254	Head, Cylinder - 150cc	1
2	14255	Gasket, Cyl Head Lower - 150cc	1
3	50032	Bolt, M6 x 1.00 x 22 FHCS	2
4	14266	Pin, M10 x 16 Dowel	2
5	14276	Tensioner, Cam Chain - 150cc	1
6	14275	Gasket, Cam Chain Tensioner - 150cc	1
7	14274	Asm, Cam Chain Tensioner - 150cc	1

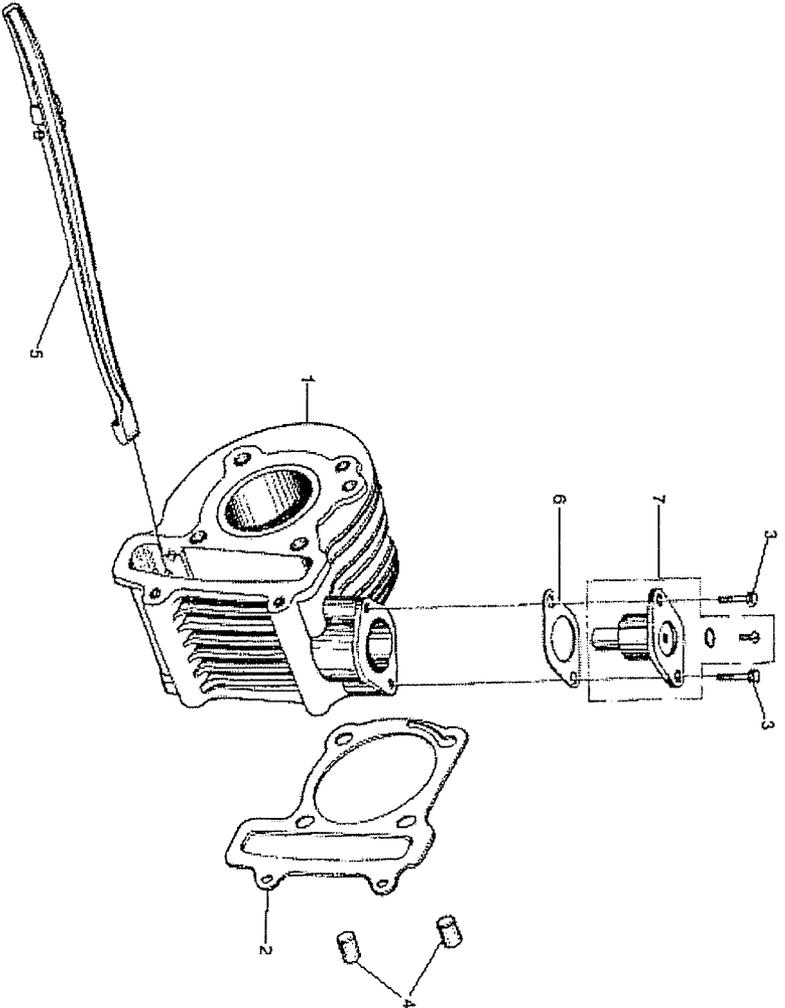

Section 3 - Engine Crankcase


Ref No	Part No	Description	QTY
1	14277	Housing, Crankcase RH - 150cc	1
2	14278	Bushing, Engine Hanger - 150cc	2
3	14279	Gasket, Crankcase - 150cc	1
4	14280	Housing, Crankcase LH - 150cc	1
5	14558	Grommet	1
6	14281	Bolt, M10 x 1.25 x 15 FHCS	1
7	14282	Washer, M10.2 x 18 x 1.3 Flat	1
8	14283	Cover, Small Left	1
9	14284	O-Ring, M108 x 2	1
10	14559	Pin	1
11	14285	O-Ring, M6 x 1.8	2
12	50104	Seal, M19.8 x 30 x 5	1
13	14286	Bolt, M6 x 1.00 x 18 FHCS	4
14	14287	Pin, M10 x 14 Dowel	2
15	14288	Bolt, M12 x 1.5 Special	1
16	14289	Washer, M12 Flat	2
17	14290	Seal, M20 x 32 x 6	2
18	14276	Tensioner, Cam Chain - 150cc	1
19	50016	Pin, M8 x 14 Dowel	2
20	14291	Stud, M8 x 1.25 x 195.5	2
21	14292	Stud, M8 x 1.25 x 187.5	2
22	14293	Washer, M8 Flat	4
23	14294	Nut, M8 x 1.25 Flange Head	4
24	14295	Bolt, M6 x 1.00 x 50 FHCS	2
25	14501	Spacer, Oil - 150cc	1
26	14296	Bolt, M6 x 1.00 x 12 FHCS	2

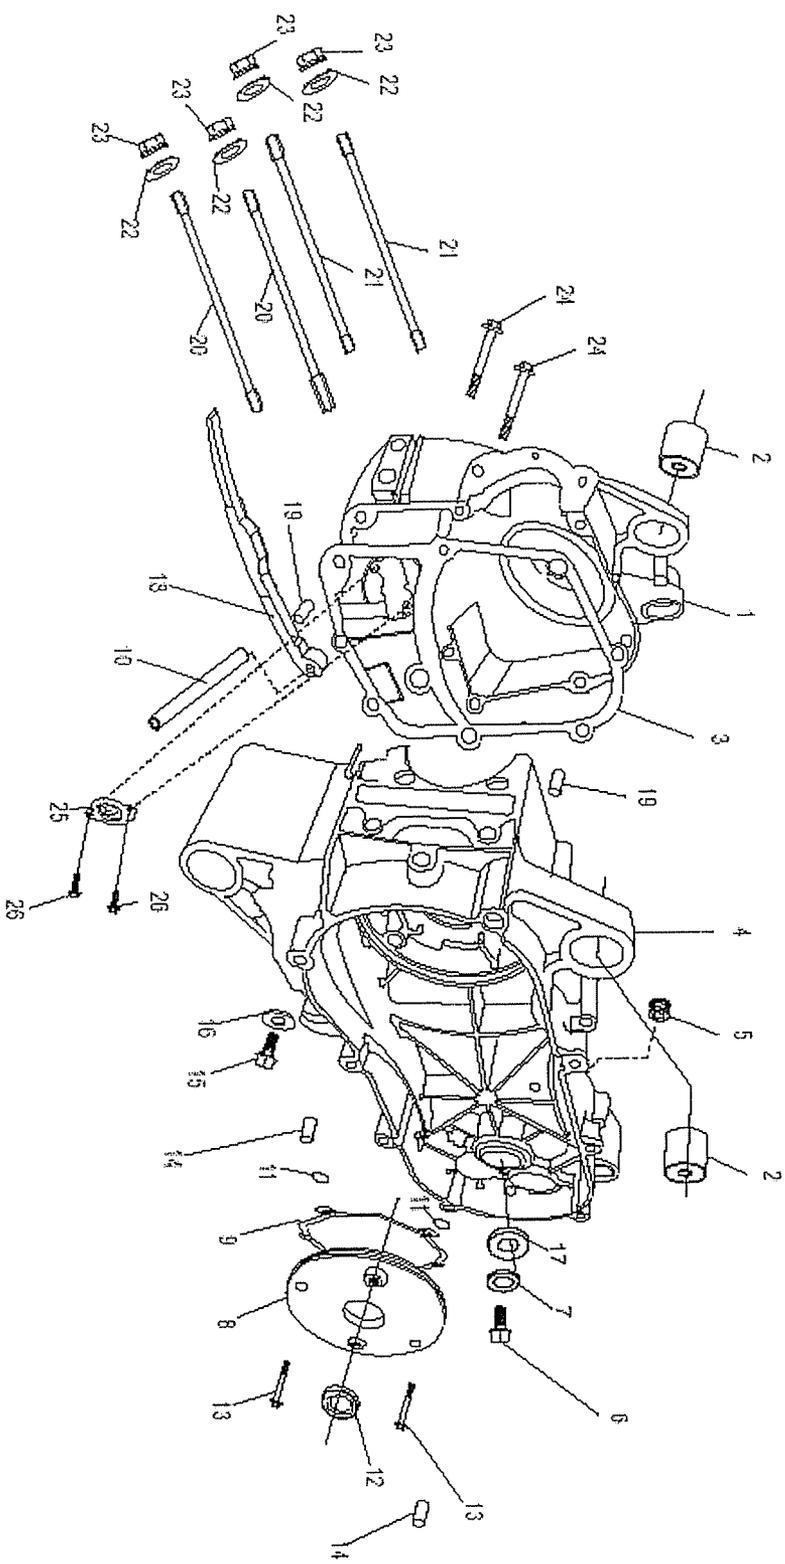

Section 4 - Transmission


Ref No	Part No	Description	QTY
1	14297	Housing, Outer Transmission - 1500cc	1
2	14298	Gear, Pri Drive - 1500cc	1
3	14299	Gear, Sec Drive - 1500cc	1
4	14300	Asm, Shift Gear Cluster F/N/R - 1500cc	1
5	14301	Gear, Final Drive Shaft	1
6	14302	Asm, Shift Selector - 1500cc	1
7	14303	Pawl, Shift Selector - 1500cc	1
8	14304	Rod, Shift Pawl - 1500cc	1
9	14305	Shaft, Shifter Cam - 1500cc	1
10	14306	Gasket, Transmission Case - 1500cc	1
11	14307	Tube, Transmission Vent	1
12	14308	Nipple, Vent Tube	1
13	14309	Ball, Shift Indent - 1500cc	1
14	14310	Spring, Shift Indent - 1500cc	1
15	14311	Gasket, Shift Indent - 1500cc	1
16	14312	Bolt, Shift Indent - 1500cc	1
17	14502	Outlet, Drain - 1500cc	1
18	14313	Bolt, Drain/Fill Plug - 1500cc	2
19	14314	Gasket, Trans Drain Plug - 1500cc	2

Ref No	Part No	Description	QTY
20	14296	Bolt, M6 x 1.00 x 12 FHCS	2
21	14315	Washer, M6 Flat	2
22	14287	Pin, M10 x 14 Dowel	2
23	14316	Spacer, M15 Inner Gear	1
24	Y00055	Bearing, 6202 15 x 35 x 11	1
25	50102	Bearing, 6203 17 x 40 x 12	1
26	82407	Bearing, 6204 20 x 47 x 14	1
27	14106	Circlip, M20	1
28	14503	Bearing, 6302 15 x 42 x 13	1
29	14504	Bearing, RNA4905 30 x 42 x 17	1
30	14505	Bushing, Shock Absorbing - 1500CC	2
31	14318	Seal, M30 x 40 x 6	1
32	82874	Bearing, 6205 25 x 52 x 15	1
33	14506	Spacer, M25 x 34 x 1	1
34	14319	Circlip, M25	1
35	14320	Circlip, M52	1
36	14321	Clamp, Wire	1
37	14235	Bolt, M6 x 1.00 x 40 FHCS	10

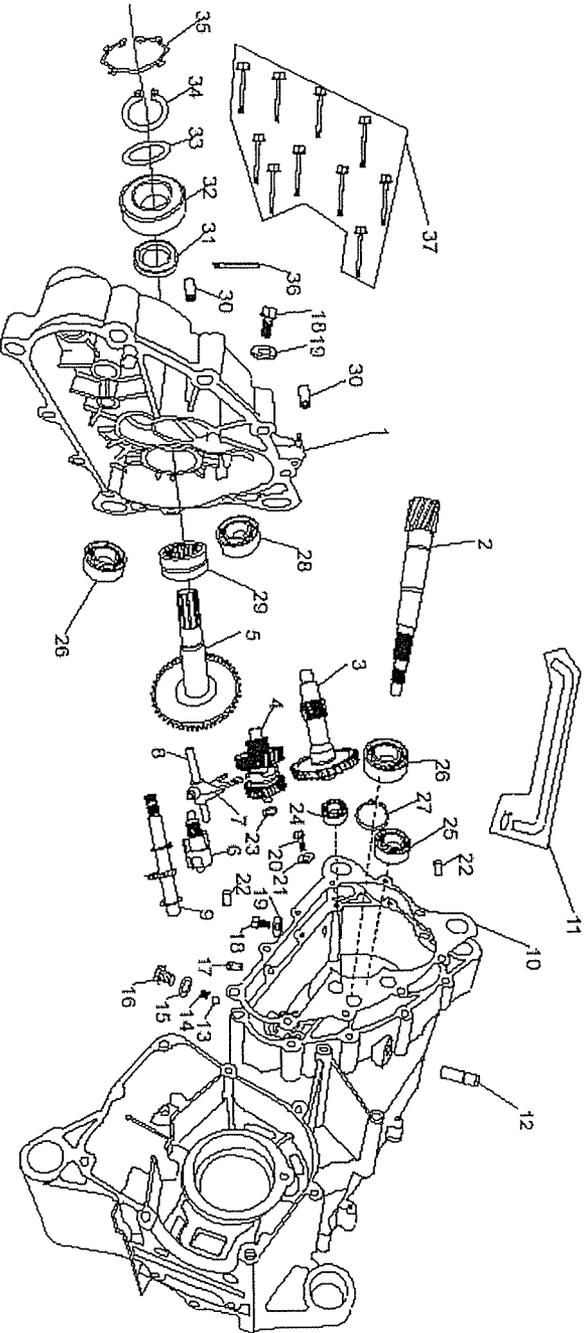


Section 5 - CVT Cover

Ref No	Part No	Description	QTY
1	14323	Cover, CVT - 150cc	1
2	14507	Bracket, Exhaust - 150cc	1
3	14324	Nut, M12 x 1.25 Locking Flange	1
4	14508	Bearing, 6200 10 x 30 x 9	2
5	14325	Gasket, CVT Cover - 150cc	1
6	14235	Bolt, M6 x 1.00 x 40 FHCS	8
7	14322	Snorkel, CVT - 150cc	1
8	14322	Snorkel, CVT - 150cc	1
9	14509	Clamp, Snorkel - 150cc	2

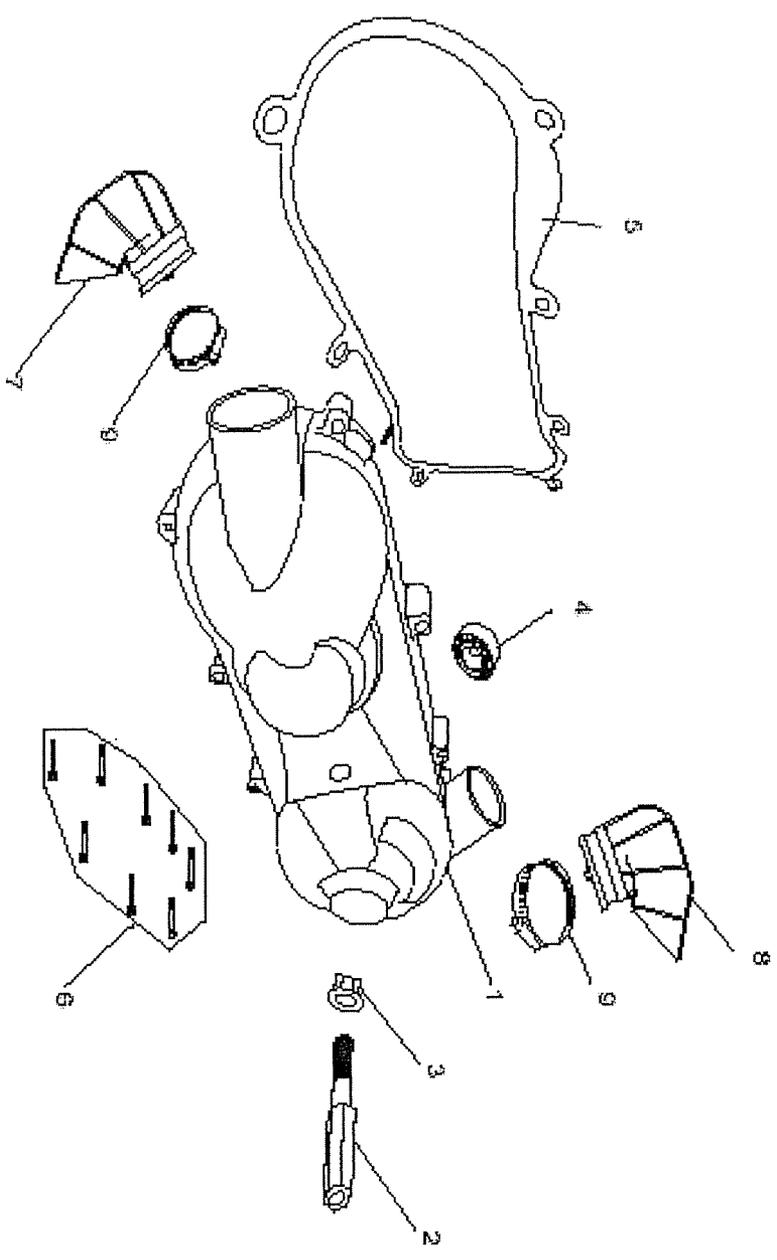


Section 6 - Outer Crankcase Asm

Ref No	Part No	Description	QTY
1	14326	Cover, Outer Crankcase RH - 150cc	1
2	14327	Gasket, Outer Crankcase - 150cc	1
3	14328	Cap, Oil Drain - 150cc	1
4	14329	Screen, Oil Filter - 150cc	1
5	14330	Spring, Oil Filter Screen - 150cc	1
6	14331	Dipstick, Oil Fill - 150cc	1
7	14332	Clamp, AC Generator - 150cc	1
8	14333	Seal, M19.8 x 30 x 5 Oil	1
9	14334	O-Ring, M30.8 x 3	1
10	14335	O-Ring, M18 x 3	1
11	50016	Pin, M8 x 14 Dowel	2
12	14336	Bolt, M6 x 1.00 x 28 FHCS	1
13	14337	Bolt, M6 x 1.00 x 95 FHCS	4
14	14338	Bolt, M6 x 1.00 x 100 FHCS	1
15	14339	Bolt, M6 x 1.00 x 110 FHCS	2
16	14340	Bolt, M6 x 1.00 x 35 FHCS	1
17	14341	Bolt, M6 x 1.00 x 20 FHCS	2
18	14296	Bolt, M5 x 0.75 x 12 FHCS	2

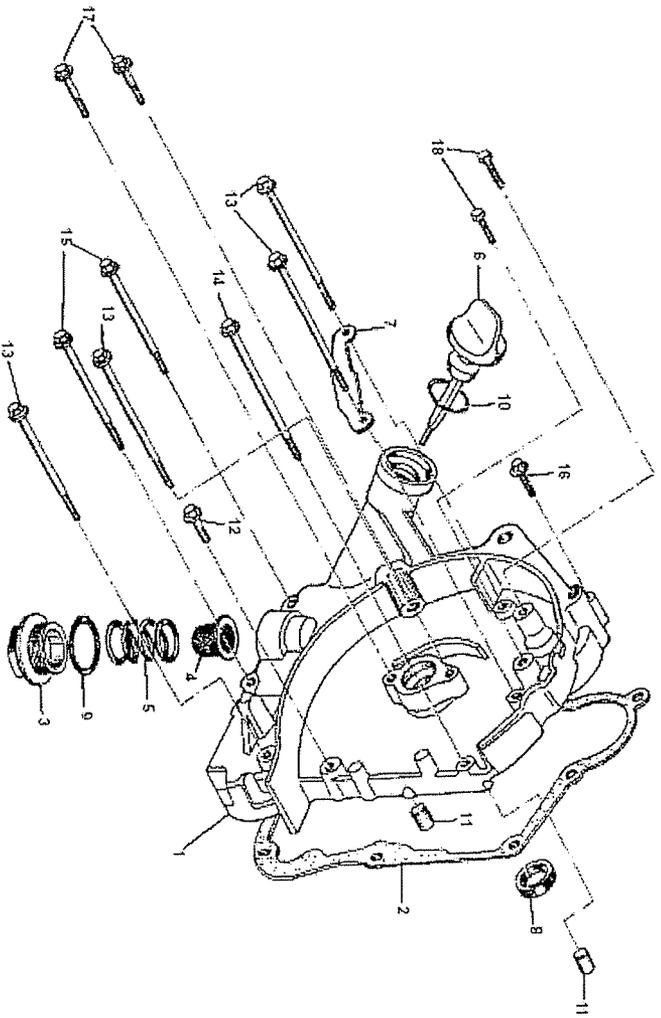


Section 7 - Piston, Crank and Connecting Rod

Ref No	Part No	Description	QTY
1	14342	Asm, Crank - Con Rod - 150cc	1
2	14324	Nut, M12 x 1.25 Hex Flange	1
3	14510	Nut, M22 x 1.00 Locking - 150CC	1
4	14511	Washer, M22 x 31 x 2.5 Flat	1
5	14344	Gear, Kick Drive	1
6	14289	Washer, M12 Flat	1
7	14324	Nut, M12 x 1.25 Hex Flange	1
8	14512	Key, Woodruff M4 X 14	1
9	14345	Clip, Piston Retaining - 150cc	2
10	14346	Pin, Piston Wrist - 150cc	1
11	14347	Piston - 150cc	1
12	14348	Kit, Piston Ring - 150cc	1

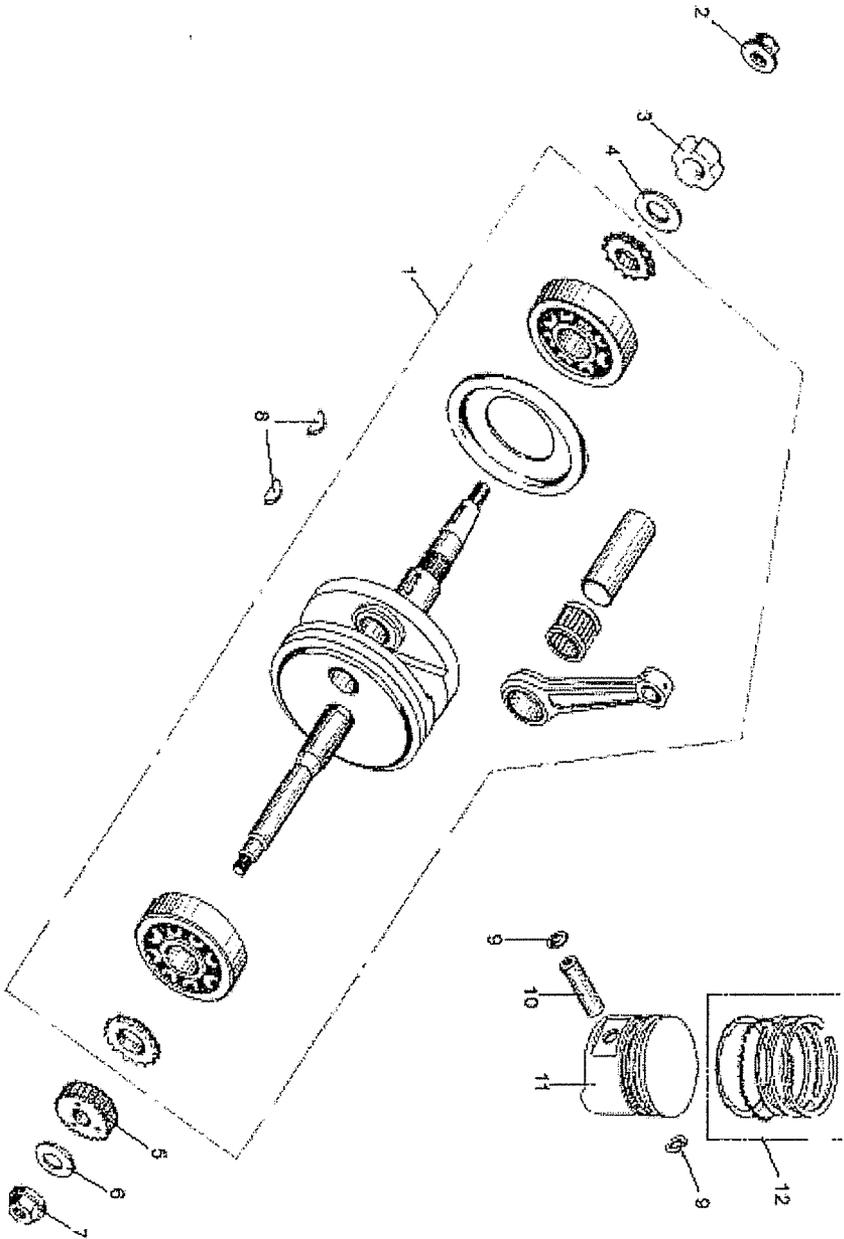


Section 8 - Camshaft Asm

Ref No	Part No	Description	QTY
1	14513	Nut, M5 x 0.5 Hex	2
2	14349	Screw, Tappet Adjustment - 150cc	2
3	14350	Arm, Valve Rocker - 150cc	2
4	14351	Shaft, Exhaust Rocker Arm - 150cc	1
5	14352	Chain, Camshaft - 150cc	1
6	14353	Camshaft - 150cc	1
7	14354	Shaft, Intake Rocker Arm - 150cc	1
8	14355	Plate, Stop - 150cc	1
9	14266	Pin, M10 x 16 Dowel	2
10	14356	Cap, Camshaft Brg - 150cc	1

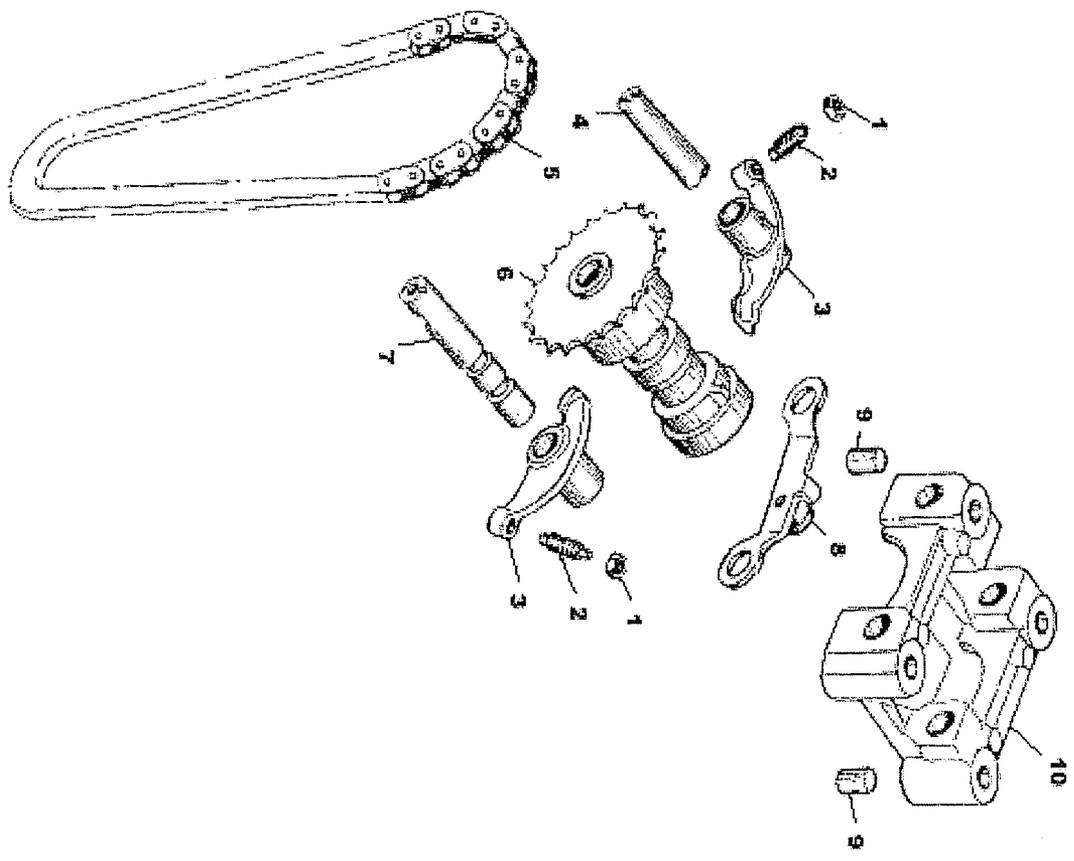


Section 9 - Oil Pump Asm

Ref No	Part No	Description	QTY
1	14357	Chain, Oil Pump - 150cc	1
2	14358	Nut, M6 x 1.00 Hex Flange	1
3	14359	Sprocket, Oil Pump - 150cc	1
4	14360	Bolt, M6 x 1.00 x 30 FHCS	2
5	14361	Asm, Oil Pump - 150cc	1

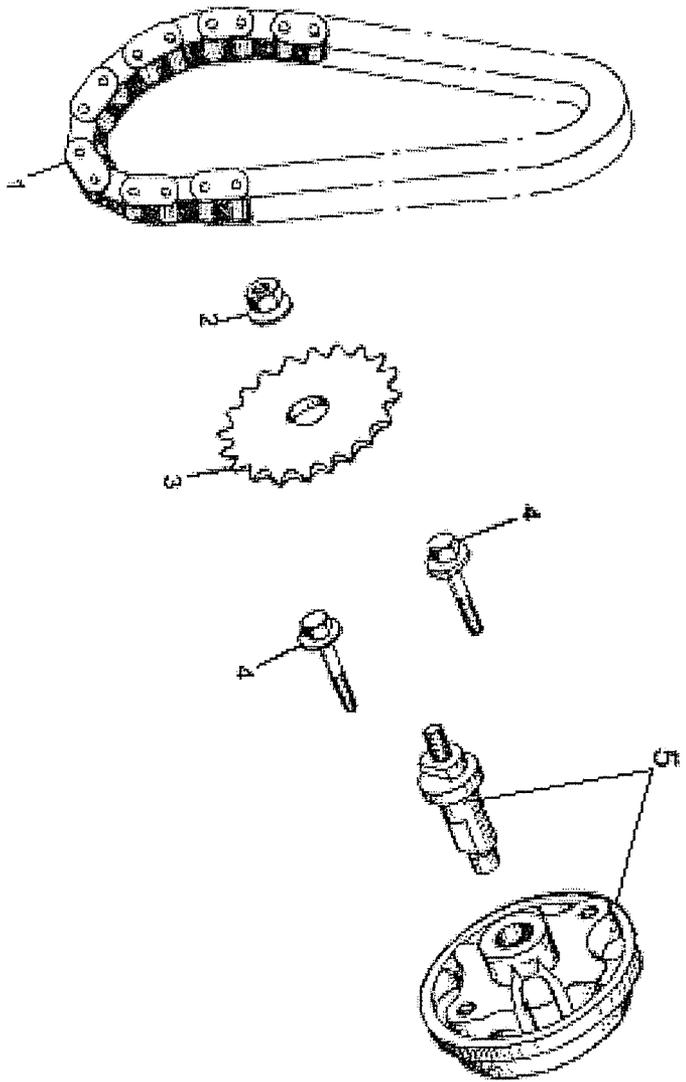


Section 10 - Driven Pulley and Clutch

Ref No	Part No	Description	QTY
1	14362	Asm, Outer Clutch - 150cc	1
2	14363	Belt, CVT - 150cc	1
3	14364	Asm, Driven Pulley - 150cc	1

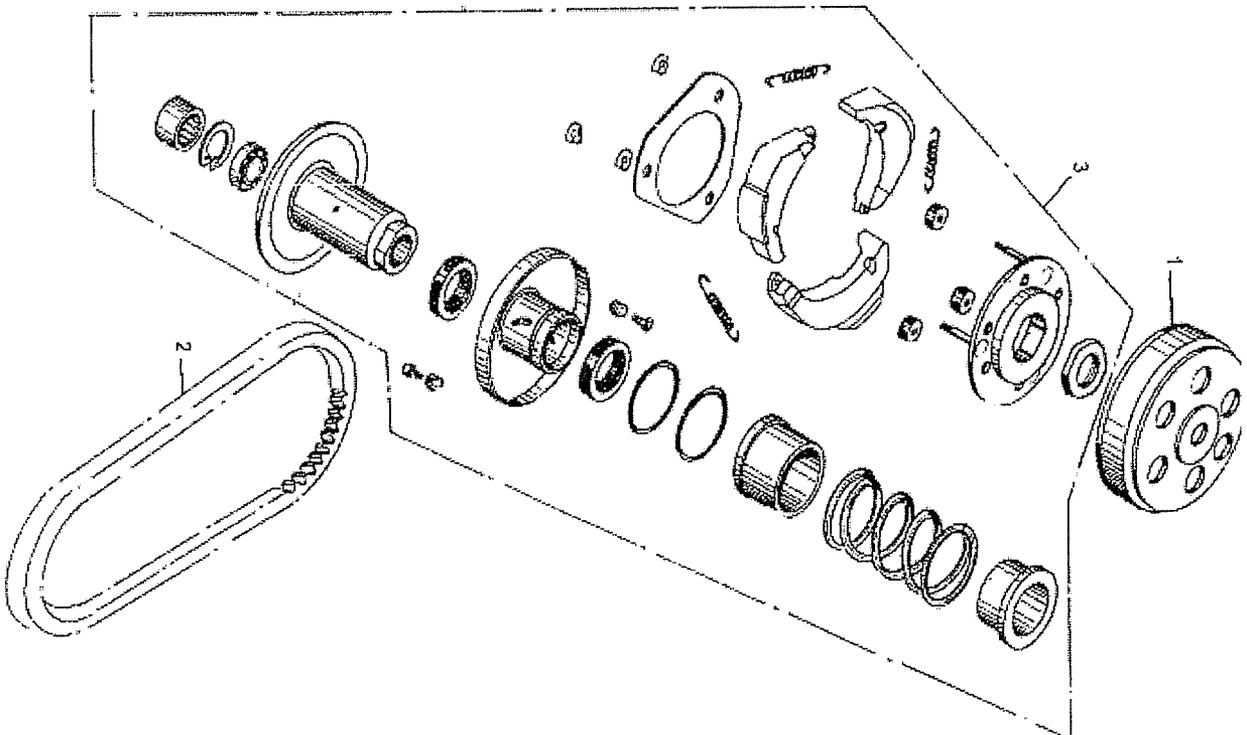


Section 11 - Engine Electrical

Ref No	Part No	Description	QTY
1	14365	Magneto - 150cc	1
2	14366	Flywheel - 150cc	1
3	14367	Fan, Cooling - 150cc	1
4	14368	Bolt, M6 x 1.00 x 15 FHCS	4

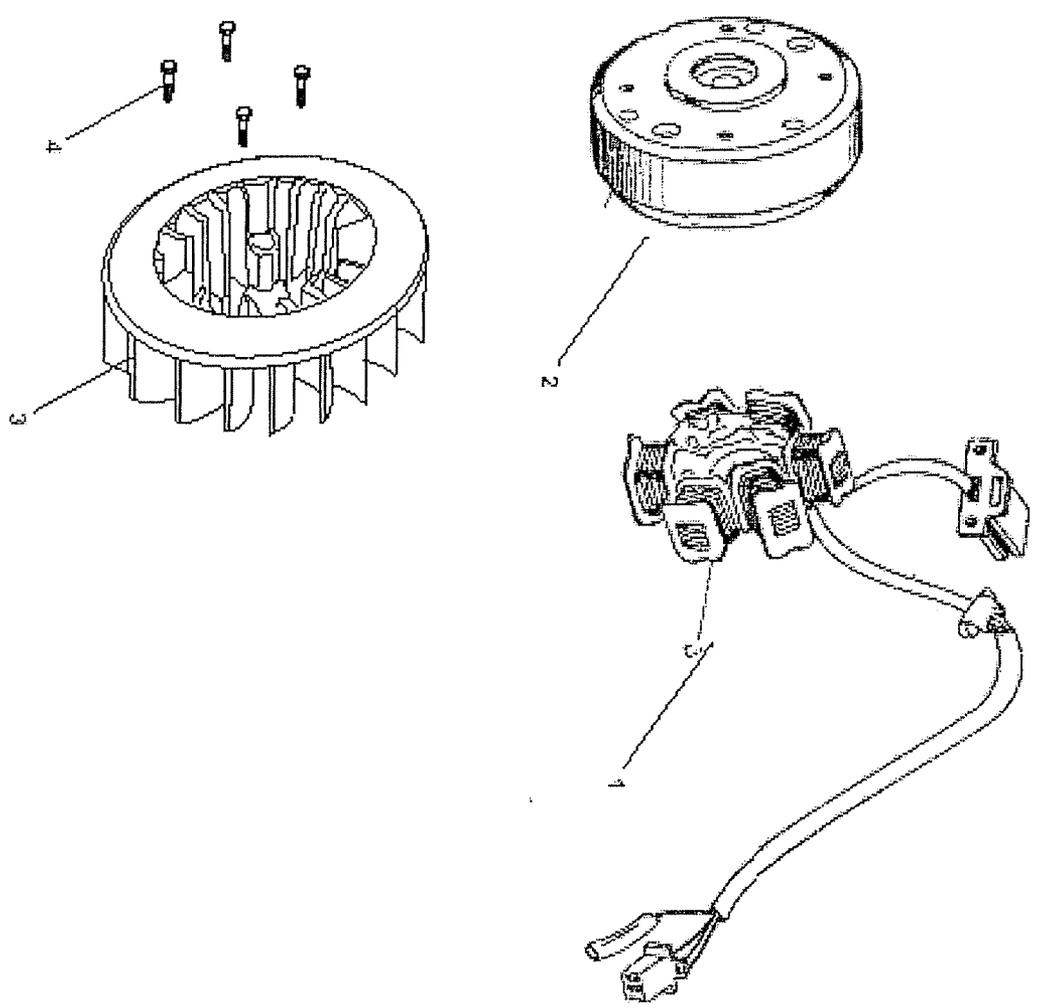


Section 12 - Electric Start

Ref No	Part No	Description	QTY
1	14369	Asm, Starter Clutch - 150cc	1
2	14370	Shaft, Starter Red - 150cc	1
3	14371	Gear, Starter Red - 150cc	1
4	14372	Bolt, M6 x 1.00 x 16 FHCS	2
5	14373	Asm, Starter Motor - 150cc	1

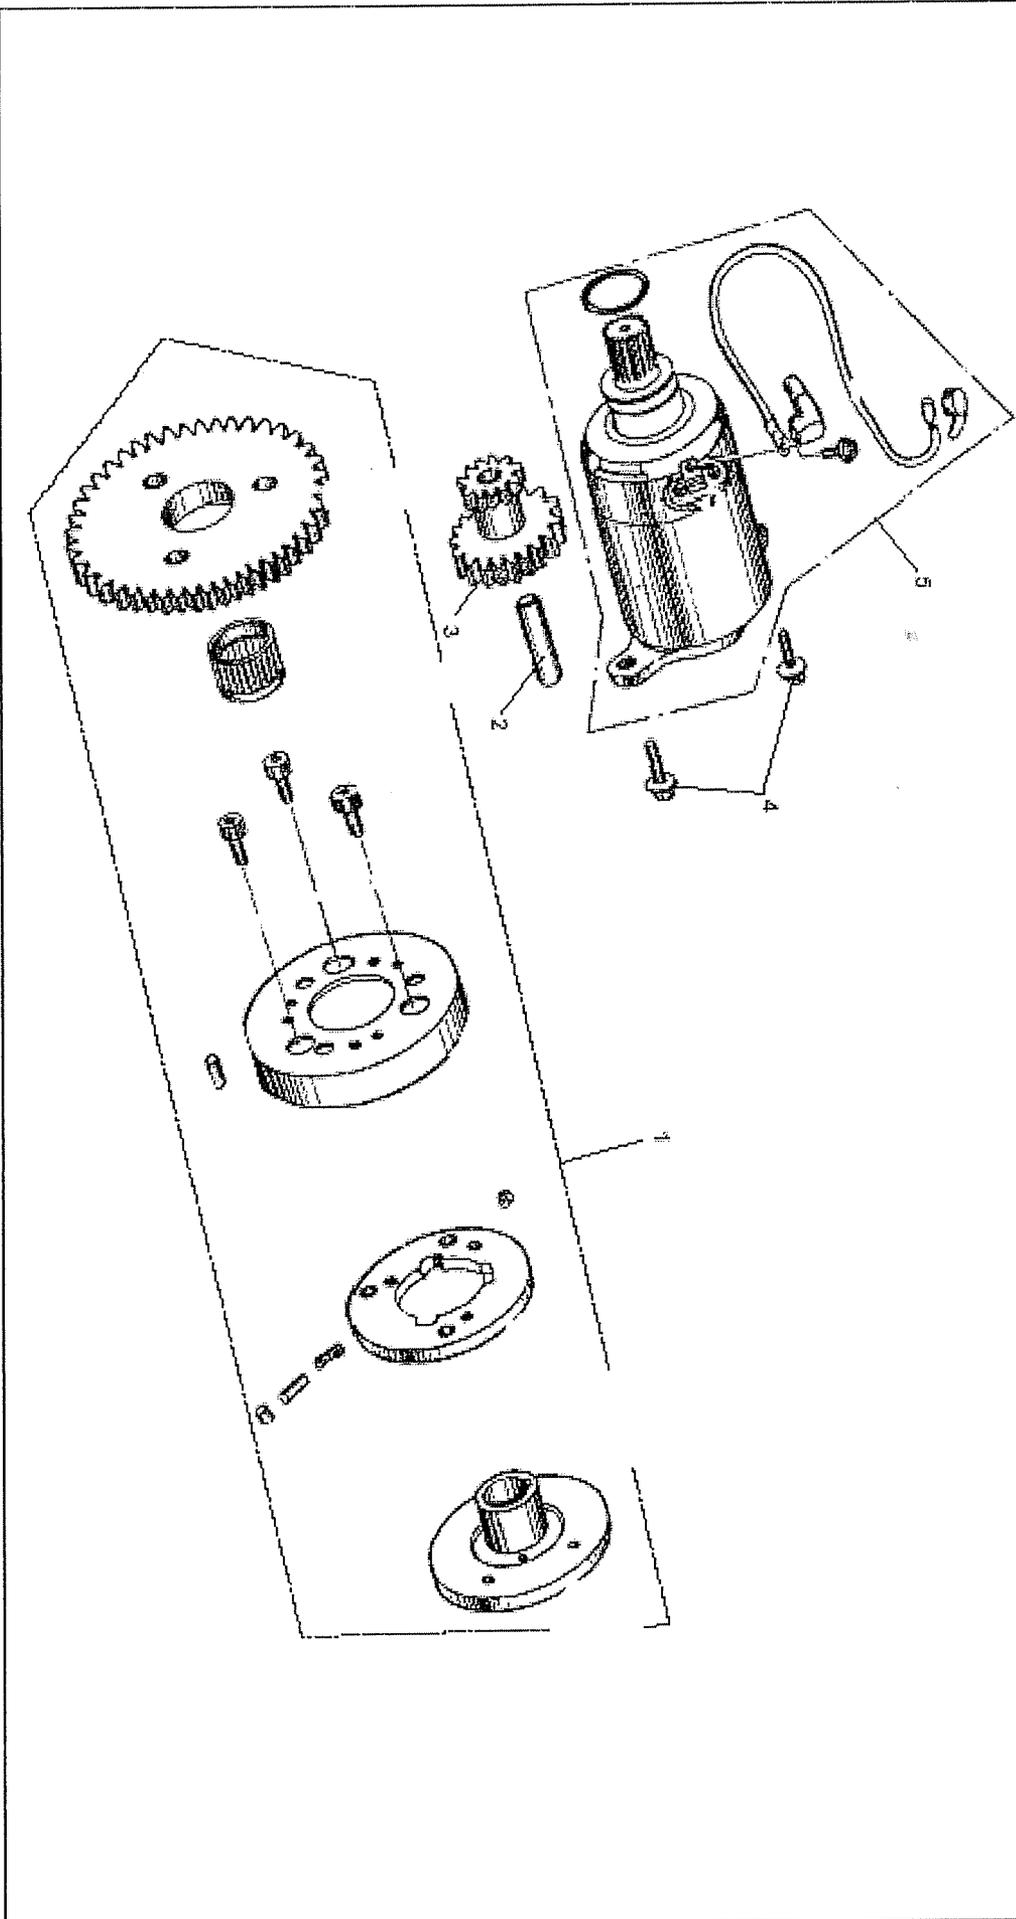



Section 13 - Driver Pulley

Ref No	Part No	Description	QTY
1	14374	Asm, Driver Pulley - 150cc	1
2	14375	Weights, Driver Pulley - 150cc	6

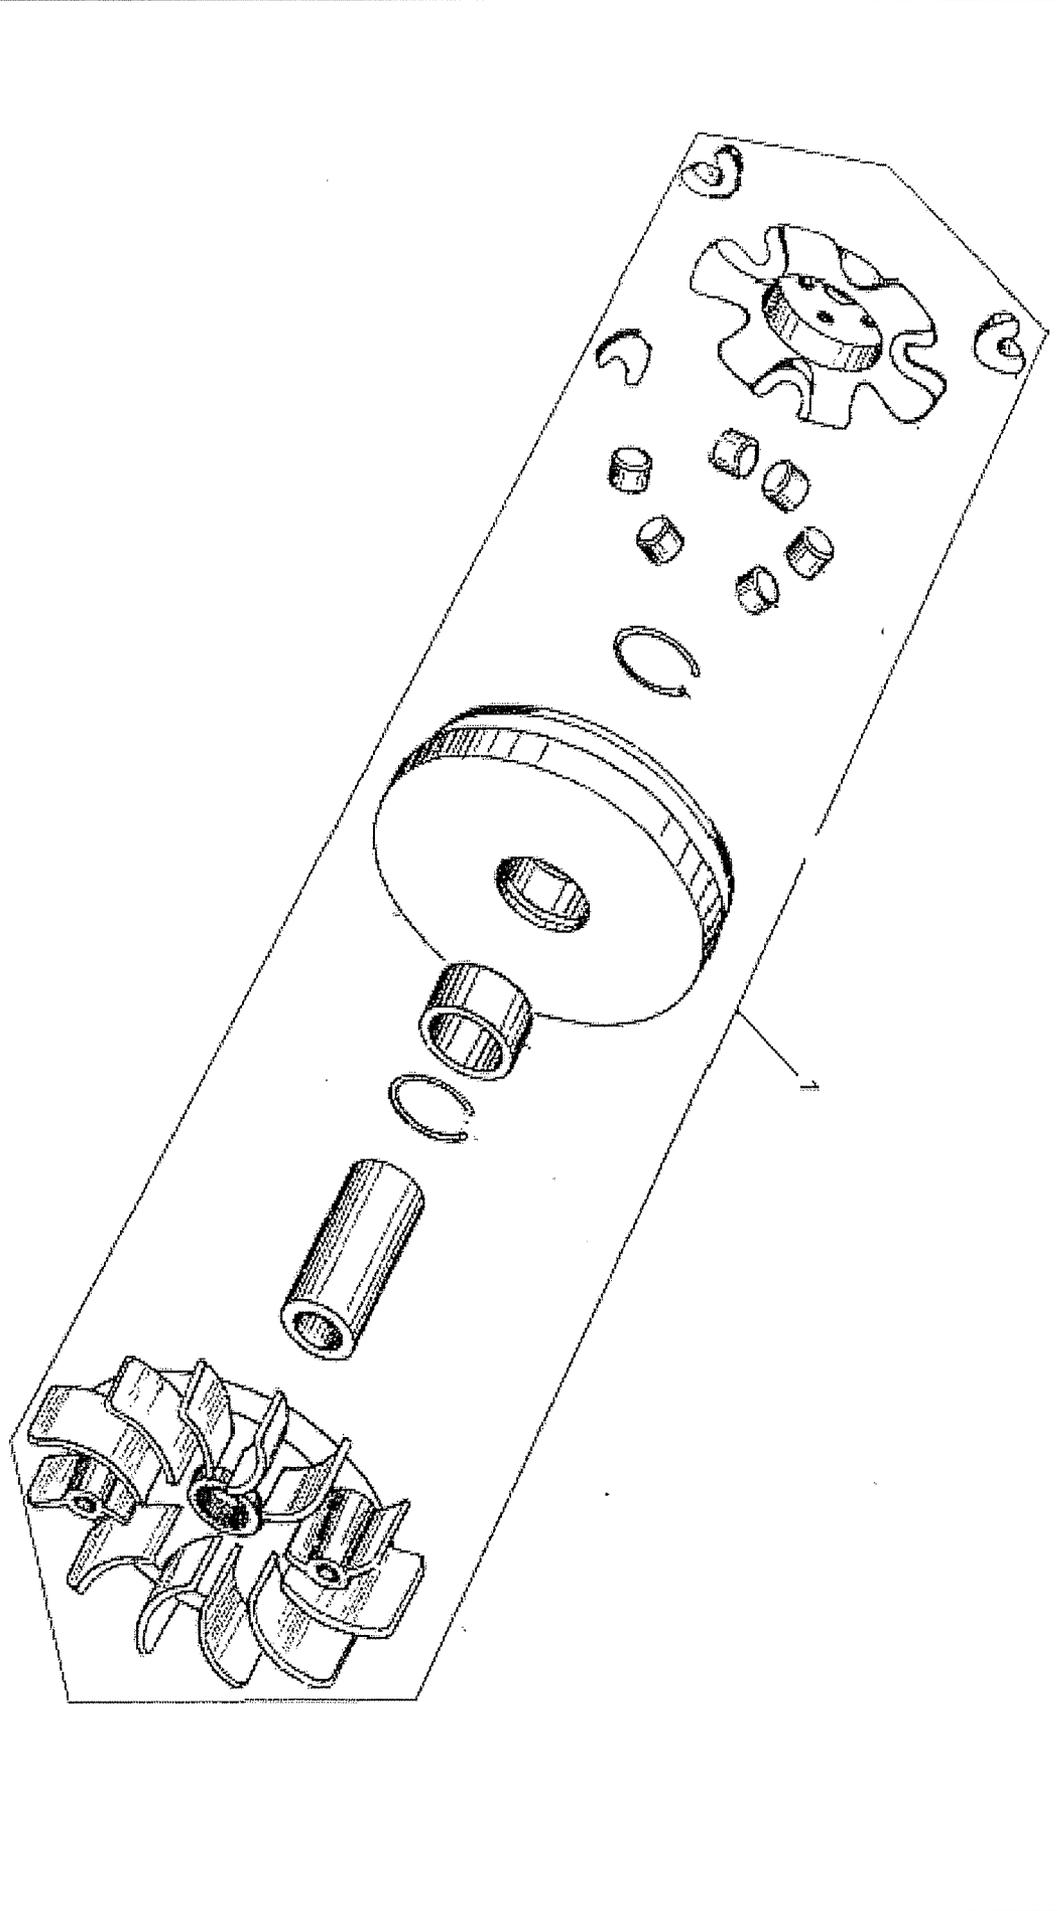


Section 14 - Oil Cooler (7150 Model Only)

Ref No	Part No	Description	QTY
1	14376	Manifold, Oil Cooler - 150cc	1
2	14514	Filter, Oil - 150cc	1
3	14537	Bolt, M12 X 28 Brake Banjo	4
4	14538	Washer, Oil Line	8
5	14515	Hose, Oil Cooling - 150cc	2
6	14560	Seal, Oil Filter	1

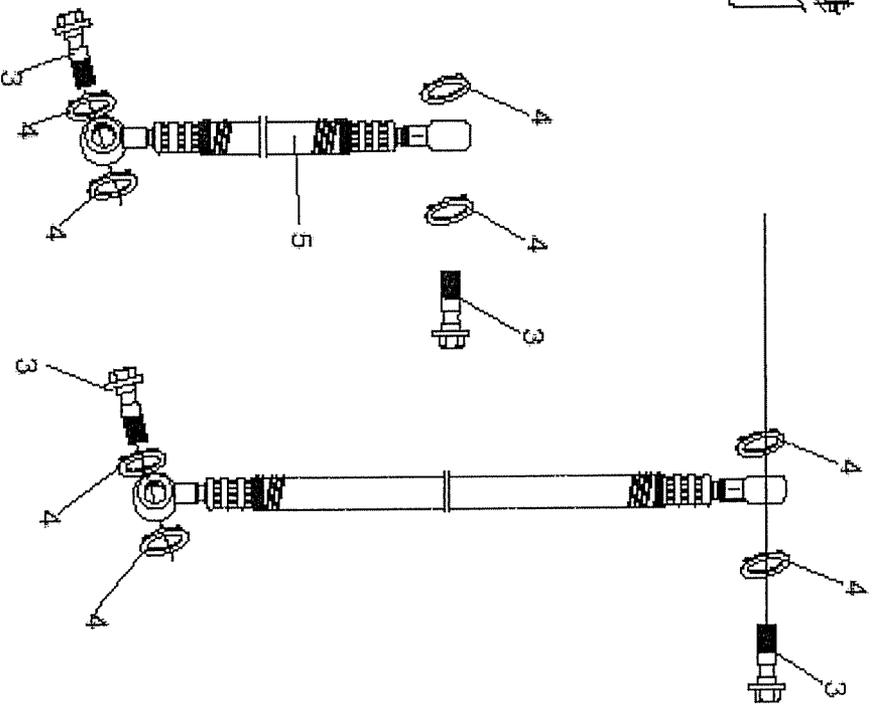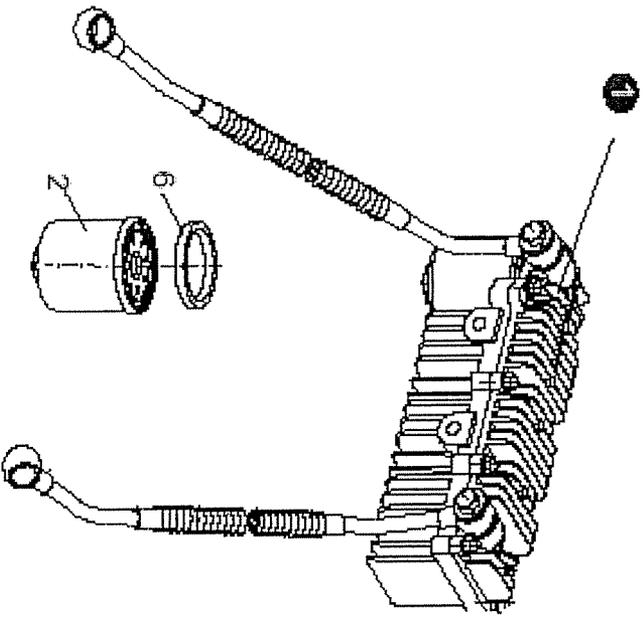


Section 15 - Fan Cover and Shroud Asm

Ref No	Part No	Description	QTY
1	14540	Cover, Fan Comp - 150cc	1
2	14541	Cover, Dust - 150cc	1
3	14542	Duct, Carburetor Cooling - 150cc	1
4	14543	Shroud, Lower - 150cc	1
5	14544	Seal, Lower Shroud - 150cc	1
6	14545	Shroud, Upper - 150cc	1
7	14546	Clip, Cord - 150cc	1
8	14547	Seal, Upper Shroud - 150cc	1
9	50065	Screw,	6
10	50069	Bolt, M6 x 25 FHCS	3
11	14539	Screw, 3.5 x 13 STFH	3

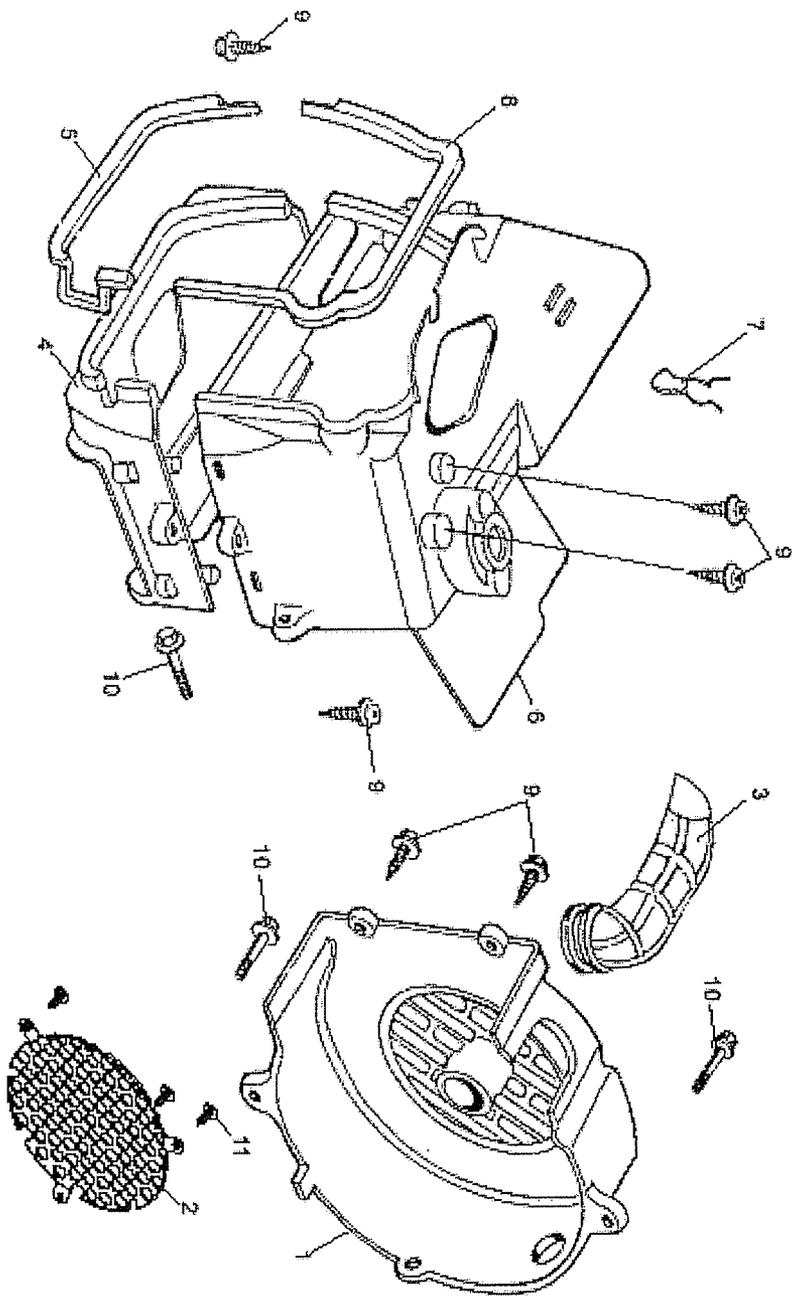


Section 16 - Carburetor

Ref No	Part No	Description	QTY
1	14561	KIT, CARB GASKET - 150CC	1
2	14562	KIT, CARB VACUUM - 150CC	1
3	14563	KIT, CARB CHOKE - 150CC	1
4	14564	KIT, CARB REBUILD - 150CC	1
5	14565	SCREW, M5 X 12 PH	3
6	14566	SCREW, M4 X 14 PH	2
7	14567	SCREW, M4 X 10 PH	2

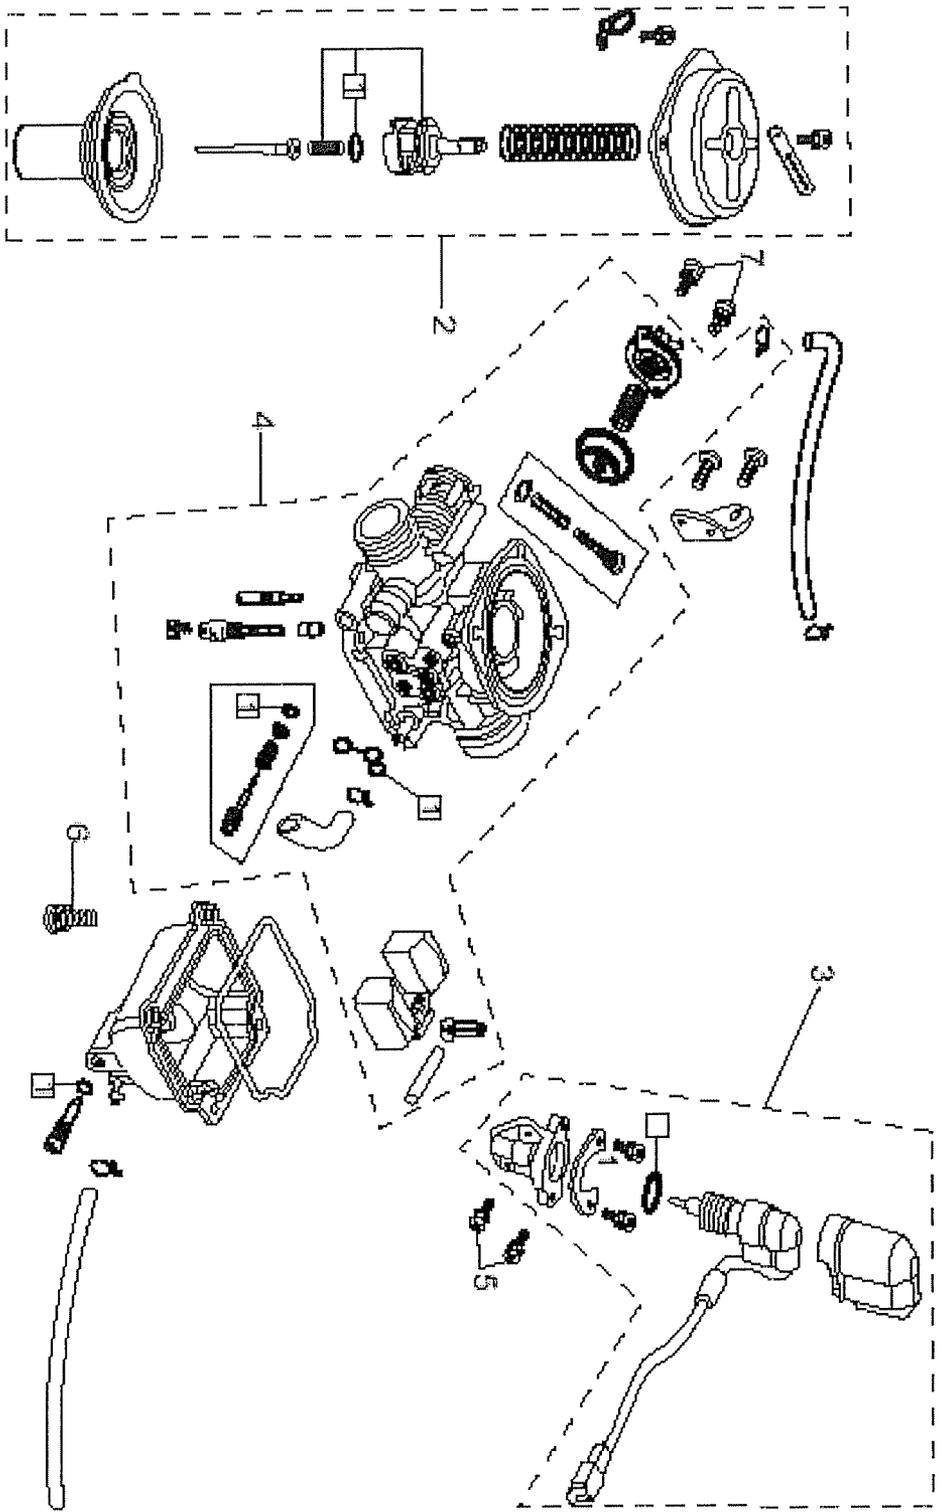

Section 17 - Frame Group


Ref No	Part No	Description	QTY
1	14080	BAR, REAR C PILLAR - 7150 - CHARCOAL	1
2	14081	WDMT, OH CROSS - 7150 - CHARCOAL	1
3	14082	BAR, OH FRONT - 7150 - CHARCOAL	2
4	14083	ENDCAP, BAR - 1.25 BLACK PLASTIC	4
5	14089	BAR, LH B PILLAR - 7150 - CHARCOAL	1
6	14085	BAR, RH B PILLAR - 7150 - CHARCOAL	1
7	14086	BOLT, M8 X 1.25 X 55 FHCS ZN	14
8	14087	WASHER, 8M CONCAVE CLAMP ZN	20
9	14491	NUT, M5 X .75 NYLOC ZN	2
10	14088	NUT, M8 X 1.25 LOCKING FLANGE ZN	6
11	13096	35WATT REPLACEMENT BULB	2
12	14090	ASM, REAR VIEW MIRROR - 7150	1
13	14494	WASHER, M5 SPLIT LOCK ZN	1
14	14098	WASHER, MIRROR MOUNT - 7150	1
15	14458	BOLT, M5 X .75 X 25 MIRROR MNT - 7150	1
16	14093	ASM, FRONT BUMPER - 7150 - RED	1
17	14247	BOLT, M8 X 1.25 X 45 FHCS ZN	4
18	13831	LIGHT W/FLAT MOUNT TAB	2
19	14426	BOLT, M6 X 1.00 X 14 FHCS ZN	6
20	14236	NUT, M6 X 1.00 NYLOC FLANGE ZN	6
21	13827	FENDER - FRONT 7150	2
22	14235	BOLT, M6 X 1.00 X 40 FHCS ZN	2
23	14096	BRACKET, RH FRONT FENDER - BLK - 7150	1
24	14094	CABLE, THROTTLE - 7150	1
25	14456	CABLE, D/NR SHIFT - 150CC	2
26	14095	CABLE, PARK BRAKE - 7150	1
27	14097	BRACKET, LH FRONT FENDER - BLK - 7150	1
28	14092	PAD, RUBER FOOT - 7150	4
29	14084	ENDCAP, BAR - 1.00 BLACK PLASTIC	4
30	14091	PAD, FOAM B PILLAR W/MWRAP - 7150	2
31	14099	HOOD, STEEL 7150 - RED	1
32	14426	BOLT, M6 X 1.00 X 14 FHCS ZN	4
33	14235	BOLT, M6 X 1.00 X 40 FHCS ZN	2
34	14236	NUT, M6 X 1.00 NYLOC FLANGE ZN	2
35	14457	SCOOP, AIR INTAKE - 7150	1
36	14424	BOLT, M5 X .75 X 20 FHCS ZN	2

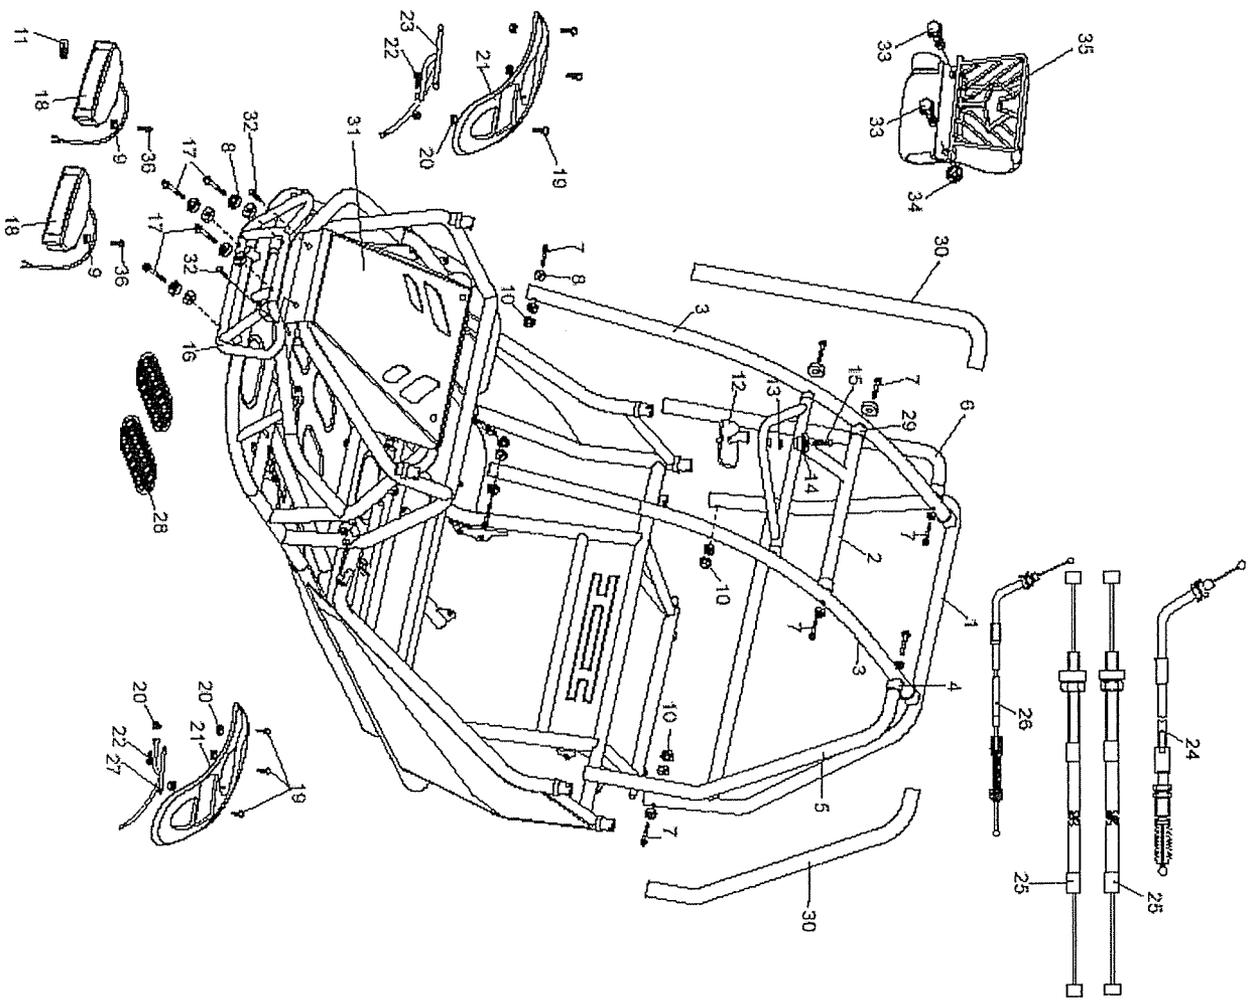

Section 18 - Steering and Brakes

Ref No	Part No	Description	QTY
1	14100	COVER, STEERING WHEEL - 6150/7150	1
2	14237	BOLT, M6 X 1.00 X 12 HHCS ZN	3
3	14238	WASHER, M6 SPLIT LOCK ZN	3
4	14102	STEERING WHEEL - 6150/7150	1
5	14103	SHAFT, STEERING - 7150	1
6	14104	BUSHING, STEERING SHAFT	2
7	14105	WASHER, M20 FLAT ZN	1
8	14106	CIRCLIP, M20	1
9	14437	BOLT, M8 X 1.25 X 25 HHCS ZN	2
10	14495	WASHER, M8 SPLIT LOCK ZN	2
11	14107	SHAFT, STEERING U-JOINT - 7150	1
12	14108	ASM, RACK AND PINION - 7150	1
13	14436	BOLT, M8 X 1.25 X 25 FHCS ZN	4
14	14459	ASM, TIE ROD END - 7150	2
15	14123	PAD, BRAKE PEDAL - BLK - 7150	2
16	14131	CAP, BRAKE MASTER CYL - 7150	1
17	14125	KNOB, STEERING TILT - 7150	1
18	14126	BUSHING, STEERING TILT	2
19	14444	BOLT, M8 X 1.25 X 240 HHCS ZN	1
20	14240	WASHER, M10 FLAT ZN	2
21	14241	WASHER, M10 SPLIT LOCK ZN	2
22	14242	NUT, M10 X 1.25 CASTLE	2
23	14110	PIN, M2 X 15 COTTER	2
24	14111	BRACKET, TILT STEERING - CHARCOAL - 7150	1
25	14112	BRACKET, RACK AND PINION MNT	2
26	14088	NUT, M8 X 1.25 LOCKING FLANGE ZN	8
27	14442	BOLT, M8 X 1.25 X 145 HHCS ZN	1
28	14113	SPRING, THROTTLE PEDAL - 7150	1
29	14439	BOLT, M8 X 1.25 X 40 FHCS ZN	2
30	14088	NUT, M8 X 1.25 LOCKING FLANGE ZN	2
31	14114	PEDAL, THROTTLE - BLACK - 7150	1
32	14453	SCREW, M5 X .75 X 15 PHMS ZN	2
33	14496	WASHER, M5 FLAT ZN	2
34	14491	NUT, M5 X .75 NYLOC ZN	2
35	14115	PEDAL, BRAKE - BLACK - 7150	1
36	14116	PIN, M6 X 24 BRAKE T - 7150	1
37	14117	PUSHROD, BRAKE ADJUST - 7150	2
38	14489	PIN, M2 X 12 COTTER	1


39	14118	SWITCH, BRAKE LIGHT - 7150	1
40	14454	SCREW, M3 X .5 X 6 PHMS ZN	2
41	14119	BUSHING, PEDAL - 7150	4
42	14120	SPRING, BRAKE PEDAL - 7150	1
43	14443	BOLT, M8 X 1.25 X 222 HHCS ZN	1
44	14121	ASM, MASTER CYLINDER - 7150	1
45	14438	BOLT, M8 X 1.25 X 35 HHCS ZN	2
46	14122	PAD, THROTTLE PEDAL - BLK - 7150	1
47	14460	BOLT, M10 X 24 BRAKE BAND	3
48	14128	HOSE, HYD BRAKE - 3/4"	1
49	14129	HOSE, HYD BRAKE - 4/3"	1
50	14130	HOSE, HYD BRAKE - 7/5"	1
51	14101	T BLOCK, BRAKE - 7150	1
52	14109	BOOT, R&P BLACK RUBBER - 7150	2
53	14127	WASHER, BRASS BRAKE LINE	6

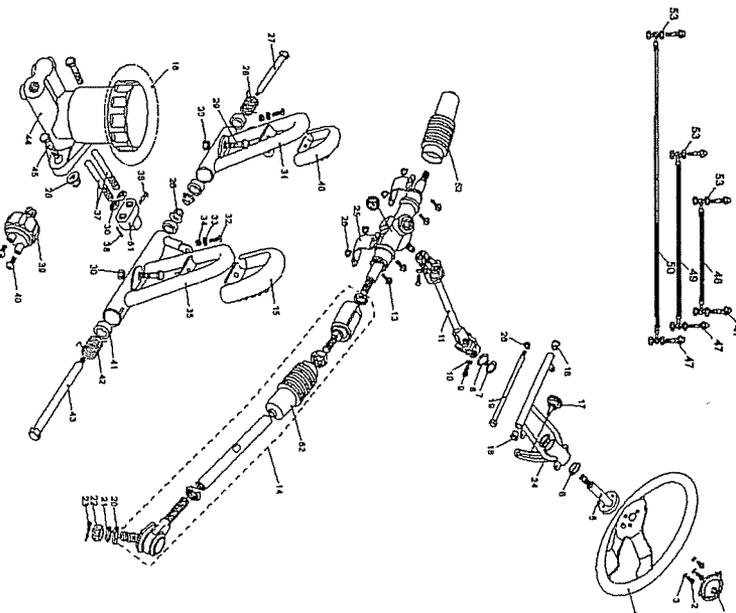

Section 19 - Front Suspension


Ref No	Part No	Description	QTY
1	14132	ASM, STRUT/SPINDLE RH-CHAR-7150	1
2	14133	BOLT, M8 X 1.25 X 105 FHCS ZN	2
3	14134	SPANNER, A ARM UPPER - 7150	2
4	14135	BUSHING, A ARM UPPER - 7150	4
5	14136	A ARM, UPPER - RED W/ZERK - 7150	2
6	14088	NUT, M8 X 1.25 LOCKING FLANGE ZN	2
7	14244	NUT, M12 X 1.25 CASTLE ZN	6
8	14137	SEAL, BALL JOINT - 6150/7150	4
9	14138	SPACER, BALL JOINT HEAD - 6150/7150	4
10	14139	ASM, STRUT/SPINDLE LH - CHAR - 7150	1
11	14455	BOLT, M8 X 1.25 X 14 SHCS PL	4
12	14140	SPANNER, A ARM LOWER - 7150	4
13	14237	BOLT, M6 X 1.00 X 12 HHCS ZN	12
14	14141	ASM, 19 x 7-8 TIRE/WHEEL RF - FAR EAST	1
15	14142	KIT, BRAKE PAD FRONT - 7150	2
16	14143	ASM, BRAKE CALIPER - LF - 7150	1
17	14144	DISC, FRONT BRAKE - 7150	2
18	14145	SEAL, M47 X 25 X 7 DUST	2
19	14146	BEARING, INNER - 6204-Z	2

20	14147	STUD, M10 X 1.25 X 31 WHEEL	8
21	14148	HUB, FRONT WHEEL - 6150/7150	2
22	14149	BEARING, OUTER - 6202-Z	2
23	14243	NUT, M10 X 1.25 LOCKING FLANGE ZN	8
24	14158	ASM, 19 X 7-8 TIRE/WHEEL LF - FAR EAST	1
25	14245	WASHER, M12 SPLIT LOCK ZN	4
26	14495	WASHER, M8 SPLIT LOCK ZN	4
27	14490	PIN, M1,8 X 20 COTTER	4
28	14150	PIN, M2 X 20 COTTER	2
29	14151	CAP, HUB NOSE - BLACK RUBBER	2
30	14246	BOLT, M10 X 1.25 X 40 FHCS ZN	4
31	14152	ASM, BRAKE CALIPER - RF - 7150	1
32	14153	SHOCK, 325MM FRONT - CHRMYEL - 7150	2
33	14447	BOLT, M10 X 1.25 X 80 FHCS ZN	4
34	14154	CAP, DUST - LWR SUSP ARM - 7150	8
35	14155	BUSHING, LWR A ARM - 7150	8
36	14156	O-RING, M21,2 X 2,65	8
37	14157	A ARM, LOWER - REDW ZERK - 7150	2

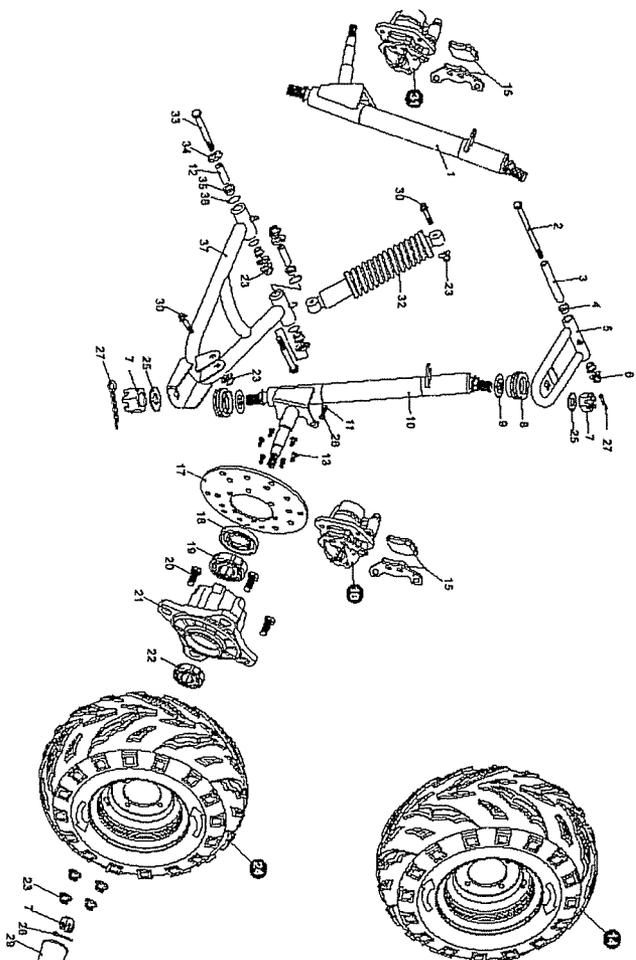


Section 20 - Rear Rack / Seat Details

Ref No	Part No	Description	QTY
1	14159	RACK, REAR CARGO - CHARCOAL - 7150	1
2	14083	ENDCAP, BAR - 1.25 BLACK PLASTIC	2
3	14160	ARM, RACK SPPT - CHARCOAL - 7150	2
4	14239	BOLT, M8 X 1.25 X 20 FHCS ZN	4
5	14088	NUT, M8 X 1.25 LOCKING FLANGE ZN	12
6	13871	CAP, FUEL - 7150	1
7	14161	ASM, FUEL TANK - CHARCOAL - 6150/7150	1
8	14086	BOLT, M8 X 1.25 X 55 FHCS ZN	4
9	14162	SPACER, FUEL TANK - 150CC	4
10	14163	BUSHING, FUEL TANK MOUNT - 150CC	4
11	14293	WASHER, M8 FLAT ZN	4
12	14451	BOLT, M12 X 1.25 X 25 FHCS ZN	2
13	50210	AUTO COCK ASSEMBLY	1
14	14164	LINE, FUEL #1 - 6150/7150	1
15	14165	LINE, VACUUM #1 - 6150/7150	1
16	14166	LINE, FUEL #2 - 6150/7150	1
17	14167	FILTER, FUEL - 6150/7150	1
18	8778	HARNES LAP SHOULDER REST	2
19	14168	ASM, HEAD REST - BLK/RED - 7150	2
20	14169	SEAT, BUCKET - RH - BLK/RED - 7150	1
21	14170	SEAT, BUCKET - LH - BLK/RED - 7150	1
22	14324	NUT, M12 X 1.25 LOCKING FLANGE ZN	4
23	14289	WASHER, M12 FLAT ZN	4
24	14451	BOLT, M12 X 1.25 X 25 FHCS ZN	4
25	14171	SLIDE, SEAT (PR) - 6150/7150	1
26	14324	NUT, M12 X 1.25 LOCKING FLANGE ZN	2
27	14461	BULB, TAIL LIGHT - 12V 10/5W - 7150	1
28	14462	ASM, TAIL LIGHT W/BULB - 7150	1
29	14440	BOLT, M8 X 1.25 X 40 HHCS ZN	4
30	14463	CAP, M22 INTERNAL TUBE - BLK	2
31	14464	FLAG, SAFETY - SLI	1
32	14465	BOLT, M12 X 1.25 X 30 FLAG MOUNT	1
33	14466	NUT, DECORATIVE PLASTIC FLAG MNT	1
34	14492	NUT, M12 X 1.25 HEX ZN	1

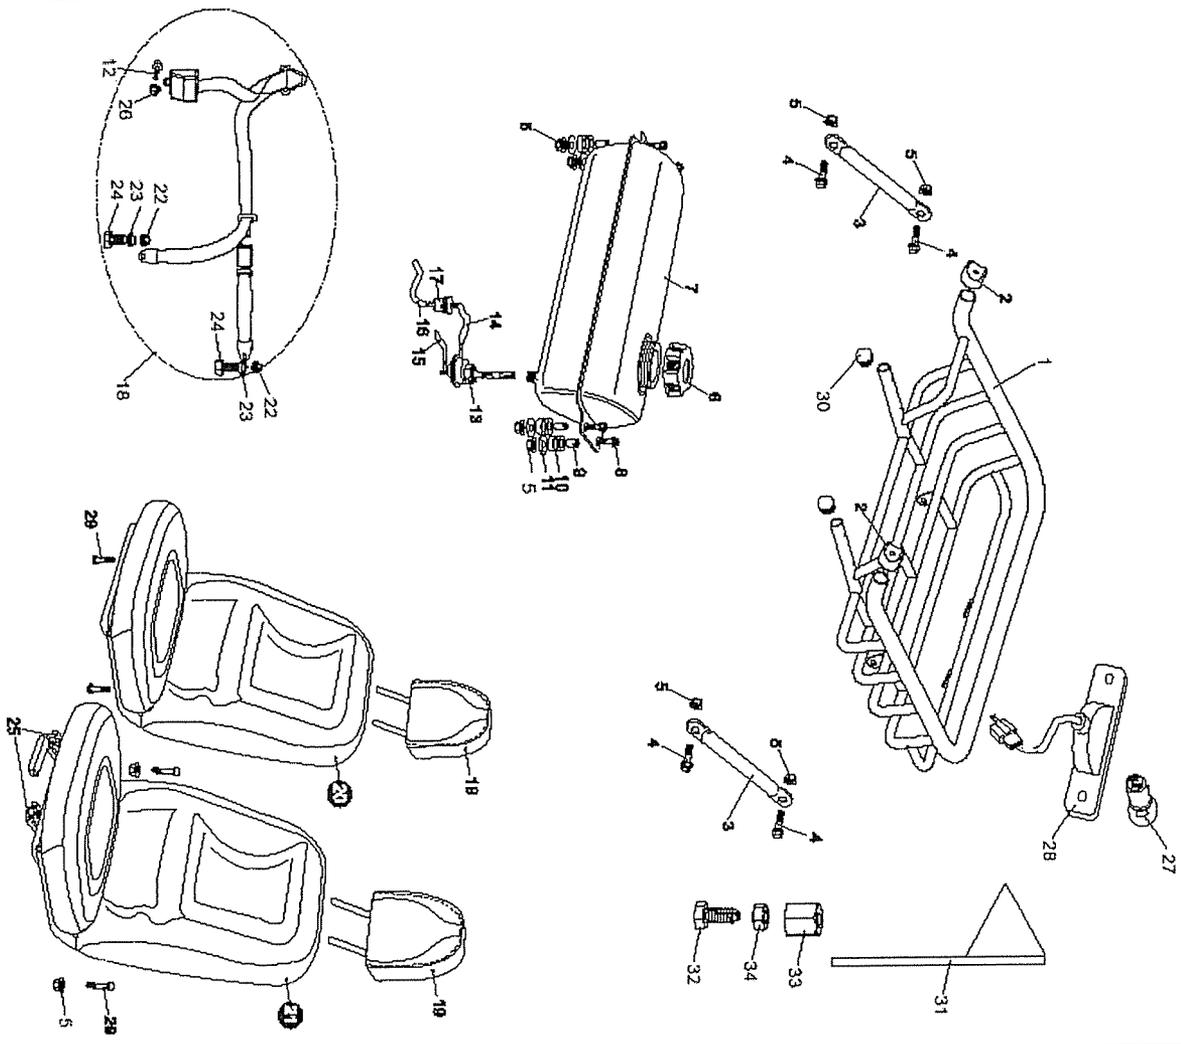


Section 21 - Rear Swingarm Asm (Upper)

Ref No	Part No	Description	QTY
1	14324	NUJ, M12 X 1.25 LOCKING FLANGE ZN	3
2	14289	WASHER, M12 FLAT ZN	2
3	14467	BUSHING, ENGINE ADJ ISOLATOR - 150CC	1
4	14468	SPACER, ENGINE ADJ CUP - 150CC	1
5	14469	SPACER, ENGINE ADJ ALIGNMENT - 150CC	1
6	14479	DISC, SHIFT CONTROL - 150CC	1
7	14492	NUJ, M12 X 1.25 HEX ZN	1
8	14470	LINK, CHAIN TENSIONING - 150CC	1
9	14243	NUJ, M10 X 1.25 LOCKING FLANGE ZN	1
10	14446	BOLT, M10 X 1.25 X 45 FHCS ZN	1
11	14471	SPACER, ENGINE MOUNTING LINK - 150CC	1
12	14472	KNOB, PARK BRAKE SHIFT - BLK - 7150	1
13	14473	BRACKET, SHIFT CABLE - 150CC	1
14	14431	BOLT, M6 X 1.00 X 60 FHCS ZN	2
15	14172	COVER, ELECTRICAL - 6150/7150	1
16	14173	ASM, UPPER SWINGARM - CHARCOAL - 7150	1
17	14452	BOLT, M12 X 1.25 X 60 FHCS ZN	2
18	14420	SCREW, M4 X .75 X 31 PHMS ZN	1
19	14174	LINK, REAR SWINGARM - CHARCOAL - 7150	2
20	14175	BUSHING, SWINGARM LINK - 7150	8
21	14176	SPACER, SWINGARM LINK - 7150	4
22	14434	BOLT, M8 X 1.25 X 16 FHCS ZN	4
23	14449	BOLT, M10 X 1.25 X 195 HHCS ZN	1
24	14177	SPANNER, ENGINE MOUNT - 6150/7150	1
25	14474	COVER, PARK BRAKE SHIFTER - 7150	1
26	14475	ASM, PARK BRAKE SHIFTER - 7150	1
27	14476	ADJUSTER, PARK BRAKE CABLE - 7150	1
28	14477	SPRING, PARK BRAKE SHIFT - 7150	1
29	14478	ASM, TRANS SHIFT LEVER - 150CC	1
30	14493	NUJ, M4 X .75 HEX ZN	1

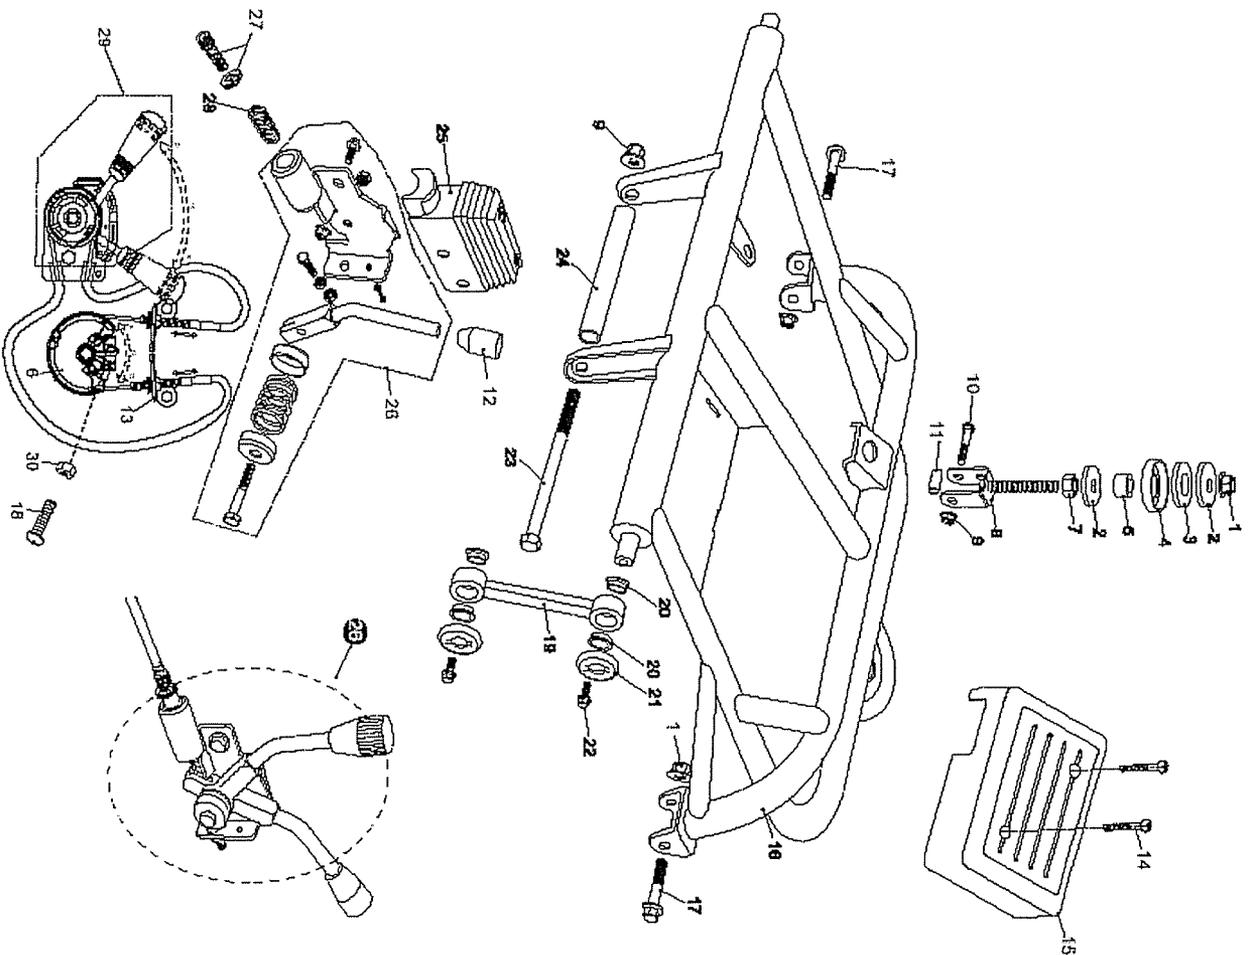


Section 22 - Engine/Muffler/Air Cleaner

Ref No	Part No	Description	QTY
1	14192	ASM, AIR CLEANER - 150CC	1
2	14423	SCREW, M5 X 16 PHSM ZN	9
3	14495	WASHER, M8 SPLIT LOCK ZN	1
4	14194	FILTER, AIR - 150CC	1
5	14201	BRACKET, #2 AIR CLEANER MNT - 6150/7150	1
6	14480	BRACKET, REAR ENG MOUNT - 150CC	1
7	14195	HOSE, AIR INTAKE - 150CC	1
8	14481	CLAMP, HOSE 45MM	1
9	14196	GASKET, EX PIPE - 150CC	1
10	14197	ASM, CARBURETOR - 6150/7150	1
11	14198	ASM, ENGINE - 6150/7150	1
12	14482	SPRING, EXHAUST PIPE - 150CC	2
13	50050	NUT (HEX) CAP M6	2
14	14236	NUT, M6 X 1.00 NYLOC FLANGE ZN	2
15	14483	CLAMP, SPRING 50MM	2
16	14199	ASM, MUFFLER W/SHIELD - 6150/7150	1
17	14433	BOLT, M8 X 1.25 X 15 FHCS ZN	3
18	14439	BOLT, M8 X 1.25 X 40 FHCS ZN	1
19	14239	BOLT, M8 X 1.25 X 20 FHCS ZN	3
20	14200	BRACKET, #1 AIR CLEANER MNT - 6150/7150	1
21	14445	BOLT, M10 X 1.25 X 10 FHCS ZN	1
22	14484	GUARD, CHAIN - 150CC	1
23	14426	BOLT, M6 X 1.00 X 14 FHCS ZN	2
24	14434	BOLT, M8 X 1.25 X 16 FHCS ZN	1
25	14497	WASHER, M8 X 27 X 2 FLAT ZN	1

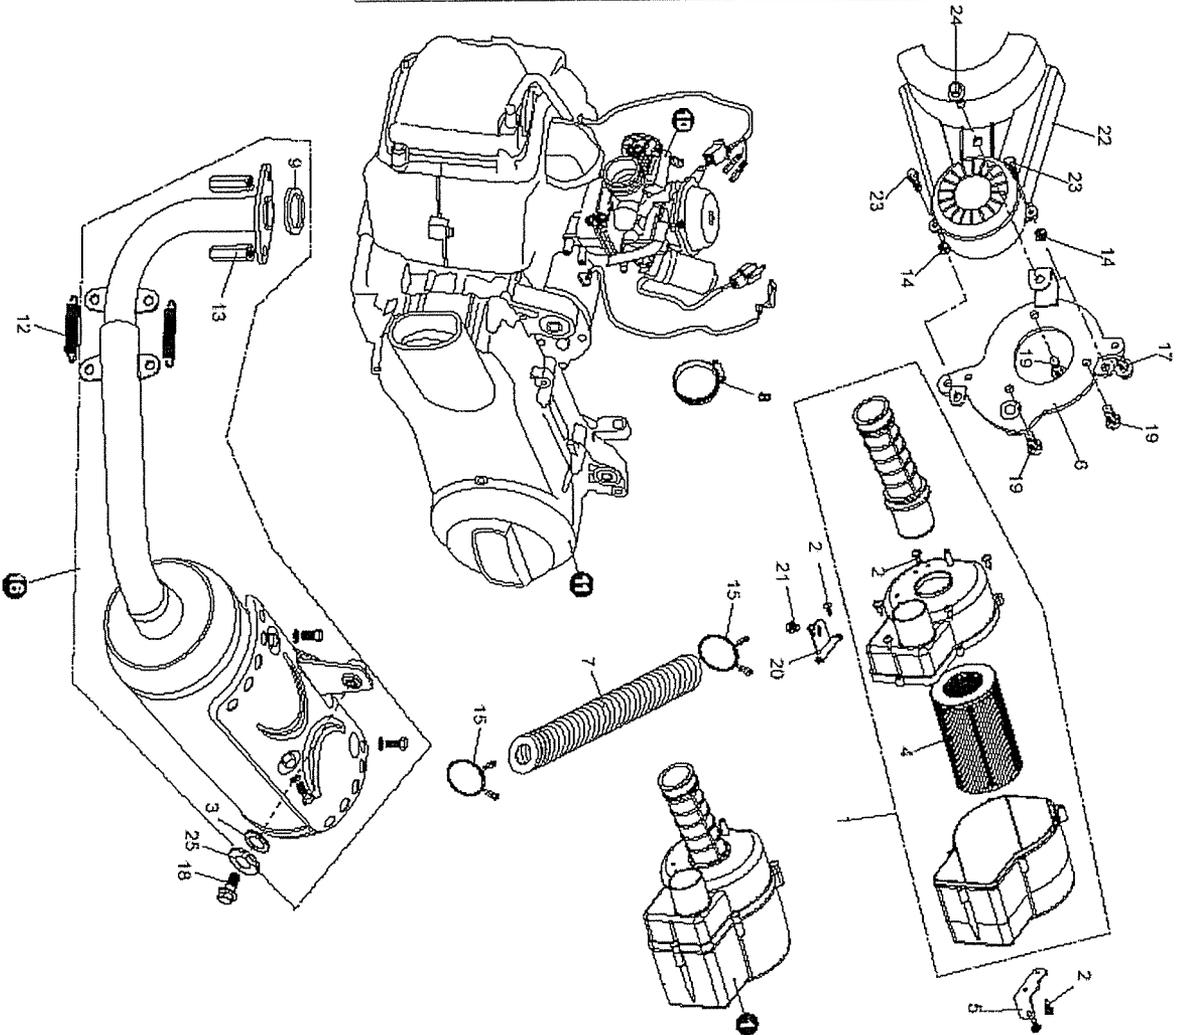


Section 23 - Rear Swingarm Asm (Lower)

Ref No	Part No	Description	QTY
1	14246	BOLT, M10 X 1.25 X 40 FHCS ZN	4
2	14243	NUT, M10 X 1.25 LOCKING FLANGE ZN	4
3	14178	SHOCK, REAR - CHRYSLER - 7150	2
4	14441	BOLT, M8 X 1.25 X 100 FHCS ZN	1
5	14179	BRACKET, LH REAR FENDER - BLK - 7150	1
6	14236	NUT, M6 X 1.00 NYLOC FLANGE ZN	12
7	14247	BOLT, M8 X 1.25 X 45 FHCS ZN	2
8	14372	BOLT, M6 X 1.00 X 16 FHCS ZN	12
9	14180	FENDER, REAR - GBLACK - 7150	2
10	14432	BOLT, M8 X 1.25 X 12 FHCS ZN	1
11	14181	BRACKET, RH REAR FENDER - BLACK - 7150	1
12	14182	BUSHING, REAR SWINGARM UPPER - 7150	4
13	14485	SPANNER, M18 X 37 - 150CC	2
14	14183	KIT, REAR BRAKE PAD - 7150	1
15	14184	ASM, REAR CALIPER W/PARK - 7150	1
16	14185	GUARD, LOWER CHAIN - 6150/7150	1
17	14186	COVER, BATTERY - 6150/7150	1
18	14187	STRAP, BATTERY HOLD DOWN - 6150/7150	1
19	14188	GASKET, BATTERY CAP - 6150/7150	1
20	14189	BATTERY - YTX12-BS	1
21	14190	WDMT, LOWER SWINGARM - CHARCOAL - 7150	1
22	14324	NUT, M12 X 1.25 LOCKING FLANGE ZN	2
23	14191	BUSHING, SWINGARM ISOLATOR - 6150/7150	2
24	14452	BOLT, M12 X 1.25 X 60 FHCS ZN	2

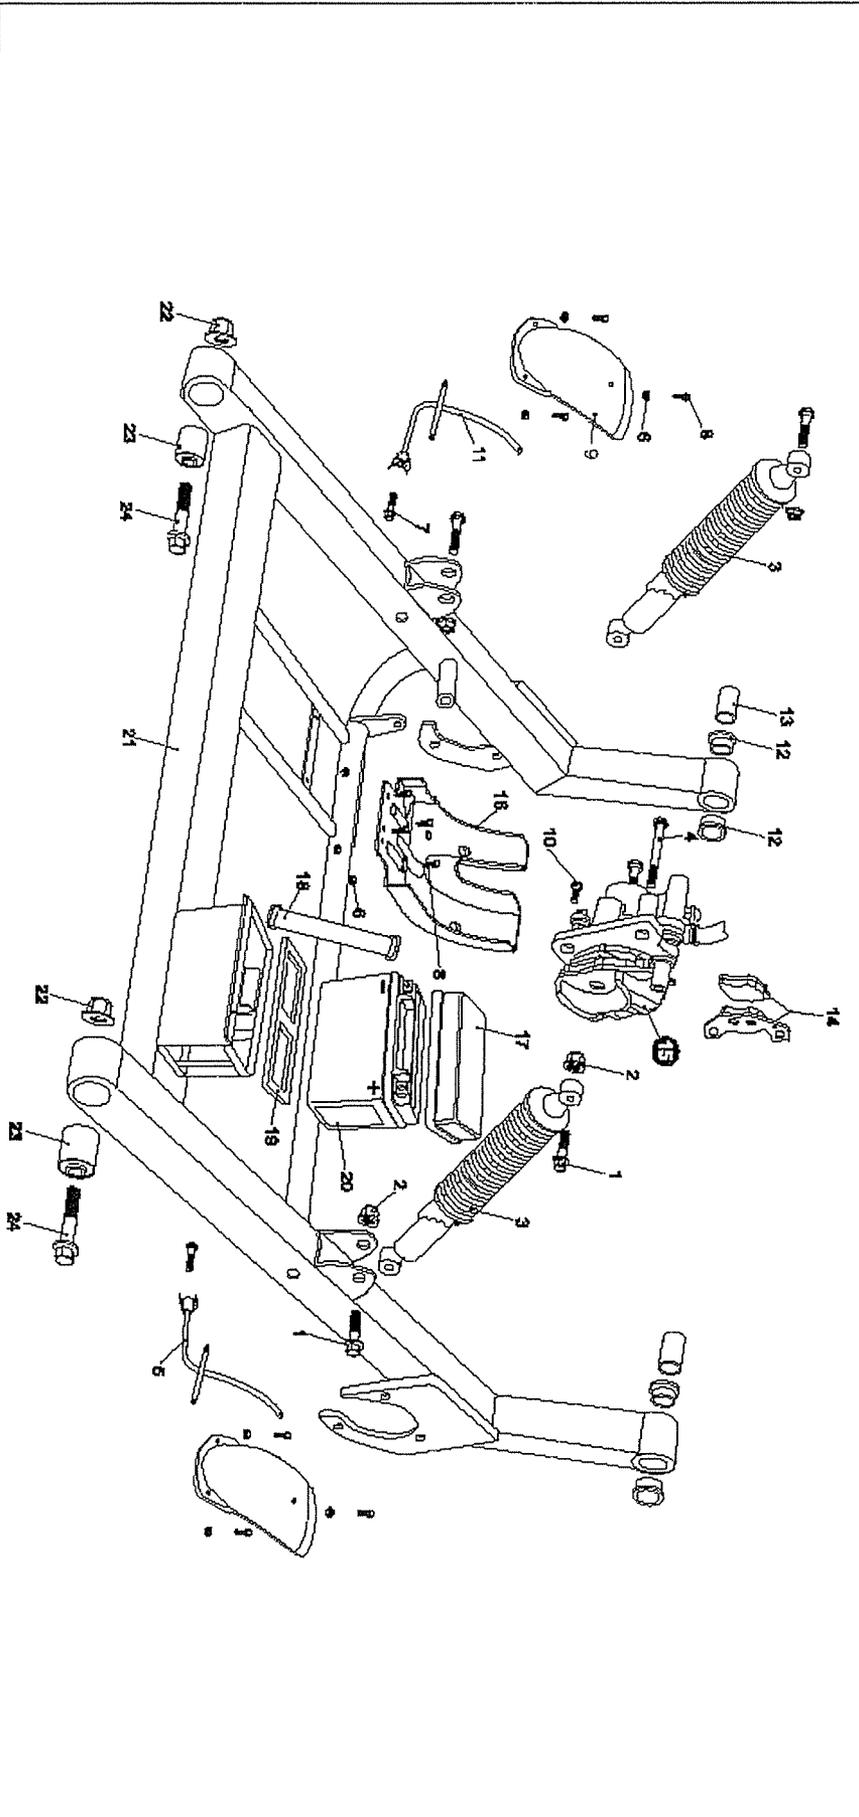

Section 24 - Rear Axle

Ref No	Part No	Description	QTY
1	14435	BOLT, M8 X 1.25 X 22 FHCS ZN	4
2	14202	DISC, 8.75 REAR BRAKE - 6150/7150	1
3	14088	NUT, M8 X 1.25 LOCKING FLANGE ZN	16
4	14203	AXLE - 6150/7150	1
5	14204	CHAIN 50 X 56P INC ML	1
6	14205	SPROCKET, 50P 32T - 6150/7150	1
7	14436	BOLT, M8 X 1.25 X 25 FHCS ZN	4
8	14206	SEAL, M50 X 34 X 7 DUST	2
9	14207	HOUSING, AXLE BRG - 6150/7150	2
10	14208	BEARING - 6206	2
11	14209	FLANGE, BEARING - 6150/7150	2
12	14439	BOLT, M8 X 1.25 X 40 FHCS ZN	6
13	14210	SEAL, M42 X 30 X 7 DUST	2
14	14147	STUD, M10 X 1.25 X 31 WHEEL	8
15	14211	HUB, REAR WHEEL - 6150/7150	2
16	14212	ASM, 21X10-10 TIRE/WHEEL RH - FAR EAST	1
17	14215	MASTER LINK 50	1
18	14243	NUT, M10 X 1.25 LOCKING FLANGE ZN	8
19	14214	ASM, 21X10-10 TIRE/WHEEL LH - FAR EAST	1
20	14248	SPACER, M16 X 16 X 4	2
21	14249	NUT, M16 X 2.00 CASTLE	2
22	14213	PIN, M4 X 30 COTTER	2
23	14151	CAP, HUB NOSE - BLACK RUBBER	2
24	14217	SPROCKET, 50P 16T - 6150/7150	1
25	14218	KEEPER, SPROCKET - 6150/7150	1
26	14296	BOLT, M6 X 1.00 X 12 FHCS ZN	2

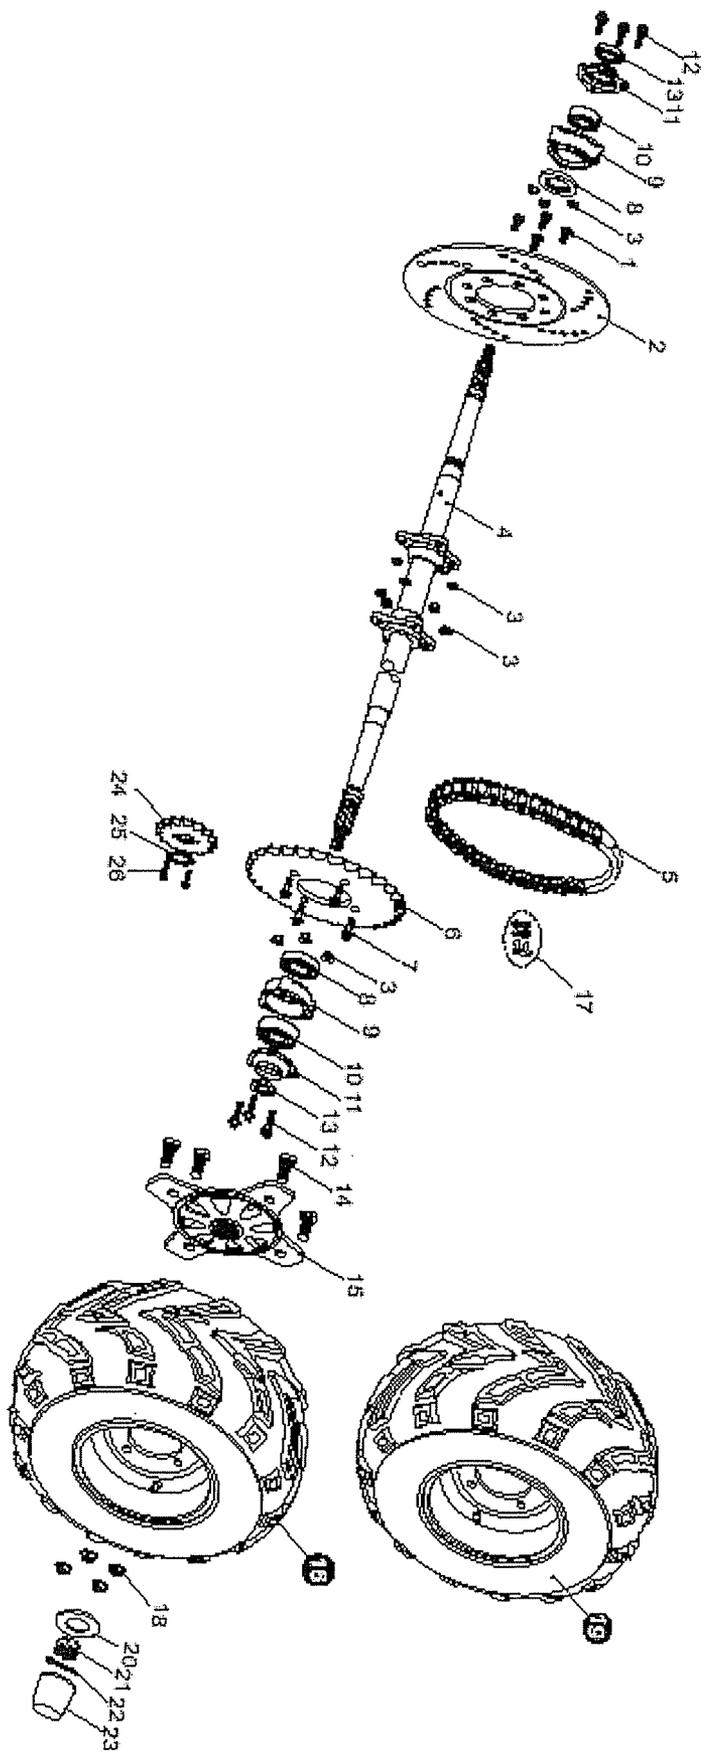

Section 25 - Electrical

Ref No	Part No	Description	QTY
1	14219	PANEL, DASH - 7150	1
2	14220	SWITCH, HEADLIGHT - 7150	1
3	14221	SWITCH, ENGINE STOP - 6150/7150	2
4	14222	SWITCH, KEYED IGNITION W/KEY - 6150/7150	1
5	14223	HARNISS, MAIN WIRING - 7150	1
6	14223	HARNISS, BATTERY - 1500C	1
7	14428	SCREW, M6 X 1.00 X 20 PHMS ZN	2
8	14236	NUT, M6 X 1.00 NYLOC FLANGE ZN	7
9	14224	REGULATOR, VOLTAGE - 6150/7150	1
10	14225	RELAY, STARTER - 6150/7150	1
11	14226	CDI - 6150/7150	1
12	14491	NUT, M5 X .75 NYLOC ZN	1
13	14425	SCREW, M5 X .75 X 25 PHMS ZN	1
14	14227	COIL, IGNITION W/CAP - 6150/7150	1
15	14487	COVER, DECORATIVE DASH BOLT - 7150	4
16	14418	SCREW, M4 X .75 X 10 PHMS ZN	4
17	14238	WASHER, M6 SPLIT LOCK ZN	4
18	14488	MAGNET, SPEED SENSOR - 7150	1
19	14228	SPEEDOMETER - 7150	1
20	14426	BOLT, M6 X 1.00 X 14 FHCS ZN	1
21	14229	BRACKET, SPEEDO SENSOR - 7150	1
22	14231	FUSE, 15AMP - WAYTEK 46115	2
23	14230	SENSOR, SPEEDO - 7150	1
24	14475	SCREW, M3 X 8 PAN HEAD	1
25	14419	SCREW, M4 X .75 X 20 PHMS ZN	1

